


# User Guide

Vaisala Indigo compatible  
humidity and temperature probes

**HMP3, HMP4, HMP5, HMP7, HMP8, HMP9, MMP8, TMP1**

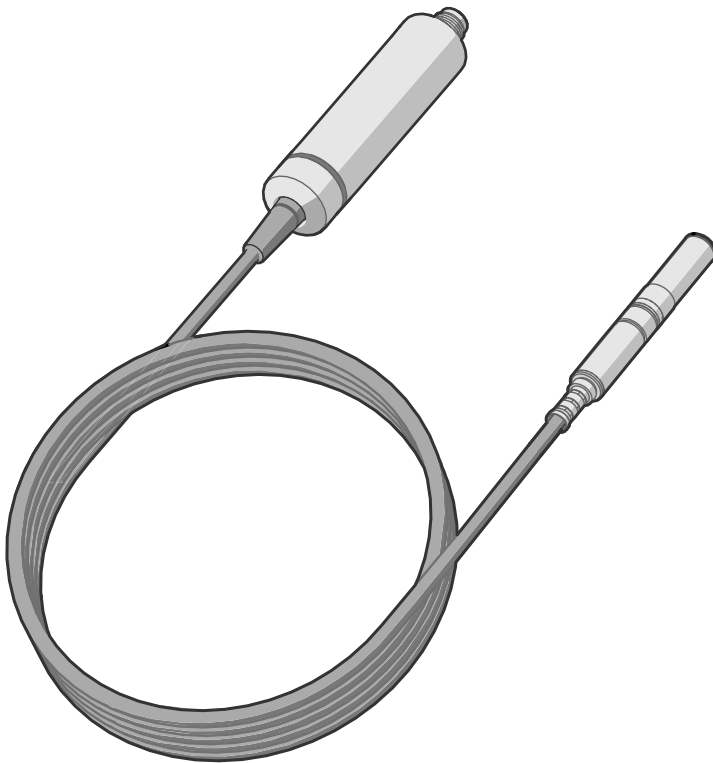

**VAISALA**

PUBLISHED BY

Vaisala Oyj

Vanha Nurmijärventie 21, FI-01670 Vantaa, Finland

P.O. Box 26, FI-00421 Helsinki, Finland

+358 9 8949 1

Visit our Internet pages at [www.vaisala.com](http://www.vaisala.com).

© Vaisala 2020

No part of this document may be reproduced, published or publicly displayed in any form or by any means, electronic or mechanical (including photocopying), nor may its contents be modified, translated, adapted, sold or disclosed to a third party without prior written permission of the copyright holder. Translated documents and translated portions of multilingual documents are based on the original English versions. In ambiguous cases, the English versions are applicable, not the translations.

The contents of this document are subject to change without prior notice.

Local rules and regulations may vary and they shall take precedence over the information contained in this document. Vaisala makes no representations on this document's compliance with the local

rules and regulations applicable at any given time, and hereby disclaims any and all responsibilities related thereto.

This document does not create any legally binding obligations for Vaisala towards customers or end users. All legally binding obligations and agreements are included exclusively in the applicable supply contract or the General Conditions of Sale and General Conditions of Service of Vaisala.

This product contains software developed by Vaisala or third parties. Use of the software is governed by license terms and conditions included in the applicable supply contract or, in the absence of separate license terms and conditions, by the General License Conditions of Vaisala Group.

## Table of contents

<b>1.</b>	<b>About this document.....</b>	<b>7</b>
1.1	Version information.....	7
1.2	Related manuals.....	8
1.3	Documentation conventions.....	8
1.4	Trademarks.....	9
<b>2.</b>	<b>Product overview.....</b>	<b>10</b>
2.1	Probe structure.....	10
2.2	Basic features and options.....	10
2.3	Output parameters.....	11
2.4	Additional features with Indigo transmitters.....	12
2.5	Safety.....	12
2.6	ESD protection.....	13
2.7	Regulatory compliances.....	13
2.7.1	FCC Part 15 compliance statement.....	13
2.7.2	Canada ICES-003 compliance statement.....	14
<b>3.</b>	<b>Installation.....</b>	<b>15</b>
3.1	HMP3 probe.....	16
3.2	HMP4 probe.....	17
3.3	HMP5 probe.....	18
3.4	HMP7 probe.....	19
3.5	HMP8 probe.....	20
3.5.1	Attaching ball valve kit to process.....	21
3.6	HMP9 probe.....	22
3.6.1	Installing HMP9 through a cable gland.....	23
3.7	MMP8 probe.....	24
3.8	TMP1 probe.....	25
3.9	Wiring.....	26
3.10	DTR502B solar radiation shield.....	27
3.10.1	Mounting probe head inside DTR502B.....	28
<b>4.</b>	<b>Configuration with Insight software.....</b>	<b>31</b>
4.1	Vaisala Insight software.....	31
4.2	Connecting to Insight software.....	31
4.3	Configuration options.....	32
4.4	Diagnostics in Insight.....	32
<b>5.</b>	<b>Using probe with Indigo transmitters.....</b>	<b>34</b>
5.1	Indigo 200 series transmitters.....	34
5.1.1	Attaching probe to Indigo 200 series transmitter.....	36
5.2	Indigo 500 series transmitters.....	37
<b>6.</b>	<b>Maintenance.....</b>	<b>38</b>
6.1	Cleaning the probe.....	38
6.1.1	Chemical tolerance.....	38

6.2	Changing the probe filter.....	39
6.3	Replacing the HUMICAP® R2 sensor.....	39
6.4	Calibration and adjustment.....	41
6.4.1	Adjustment points and requirements.....	42
6.4.2	Adjusting measurement with Insight software.....	43
6.4.3	Adjusting measurement with Indigo 200 transmitter.....	44
<b>7.</b>	<b>Troubleshooting.....</b>	<b>48</b>
7.1	Problem situations.....	48
7.2	Error messages.....	48
<b>8.</b>	<b>Technical data.....</b>	<b>51</b>
8.1	HMP3 specifications.....	51
8.2	HMP4 specifications.....	54
8.3	HMP5 specifications.....	57
8.4	HMP7 specifications.....	60
8.5	HMP8 specifications.....	63
8.6	HMP9 specifications.....	66
8.7	MMP8 specifications.....	69
8.8	TMP1 specifications.....	72
8.9	Accessories and spare parts.....	74
<b>Appendix A:</b>	<b>Modbus reference.....</b>	<b>79</b>
A.1	Default communication settings.....	79
A.2	Function codes.....	79
A.3	Data encoding.....	79
A.3.1	32-bit floating point or integer format.....	80
A.3.2	16-bit integer format.....	80
A.4	Modbus registers.....	81
A.4.1	Measurement data registers.....	81
A.4.2	Configuration registers.....	84
A.4.3	Status registers.....	86
A.4.4	Test value registers.....	88
A.5	Device identification objects.....	88
A.6	Exception responses.....	89
A.7	Modbus communication examples.....	90
<b>Maintenance and calibration.....</b>		<b>93</b>
<b>Warranty.....</b>		<b>93</b>
<b>Technical support.....</b>		<b>93</b>
<b>Recycling.....</b>		<b>93</b>

## List of figures

Figure 1	Probe parts.....	10
Figure 2	Example installation.....	15
Figure 3	HMP3 probe dimensions.....	16
Figure 4	HMP4 probe dimensions.....	17
Figure 5	HMP5 probe dimensions.....	18
Figure 6	Optional mounting flange 210696 dimensions.....	18
Figure 7	HMP7 probe dimensions.....	19
Figure 8	HMP8 probe dimensions.....	20
Figure 9	HMP9 probe dimensions.....	22
Figure 10	Installing HMP9 probe head through a cable gland.....	23
Figure 11	MMP8 dimensions.....	24
Figure 12	TMP1 probe dimensions.....	25
Figure 13	M12 5-pin A-coded male connector pinout.....	26
Figure 14	RS-485 wiring.....	27
Figure 15	DTR502B dimensions.....	28
Figure 16	Mounting DTR502B on a pole mast.....	29
Figure 17	HMP9 probe head with sensor head support 215130.....	30
Figure 18	Connecting probe to Insight.....	31
Figure 19	HMP5 in Insight software.....	32
Figure 20	HMP5 diagnostics in Insight (advanced mode).....	33
Figure 21	Probe attached to Indigo 200 series transmitter directly.....	34
Figure 22	Probe attached to Indigo 200 series transmitter with a cable.....	35
Figure 23	Attaching the probe to Indigo 200 series transmitter.....	36
Figure 24	Attaching probes to Indigo 500 transmitter.....	37
Figure 25	HMP3 probe head with filter removed.....	40
Figure 26	Calibration page in the Indigo 200 wireless configuration interface.....	46
Figure 27	HMP3 humidity measurement accuracy as a function of temperature.....	52
Figure 28	HMP3 temperature measurement accuracy over full range.....	52
Figure 29	HMP3 probe dimensions.....	54
Figure 30	HMP4 humidity measurement accuracy as a function of temperature.....	55
Figure 31	HMP4 temperature measurement accuracy over full range.....	55
Figure 32	HMP4 probe dimensions.....	57
Figure 33	HMP5 humidity measurement accuracy as a function of temperature.....	58
Figure 34	HMP5 temperature measurement accuracy over full range.....	58
Figure 35	HMP5 probe dimensions.....	60
Figure 36	HMP7 humidity measurement accuracy as function of temperature.....	61
Figure 37	HMP7 temperature measurement accuracy over full range.....	61
Figure 38	HMP7 probe dimensions.....	63
Figure 39	HMP8 humidity measurement accuracy as a function of temperature.....	64

Figure 40 HMP8 temperature measurement accuracy over full range..... 64

Figure 41 HMP8 probe dimensions.....66

Figure 42 Optional ball valve installation kit dimensions..... 66

Figure 43 HMP9 probe dimensions.....69

Figure 44  $A_w$  measurement accuracy..... 70

Figure 45 MMP8 dimensions.....71

Figure 46 TMP1 temperature measurement accuracy over full range.....72

Figure 47 TMP1 probe dimensions.....73

Figure 48 Optional duct kit 215003 dimensions..... 74

## List of tables

Table 1	Document versions (English).....	7
Table 2	Related manuals.....	8
Table 3	Availability of output parameters.....	11
Table 4	Suitability of cleaning agents.....	38
Table 5	Troubleshooting table.....	48
Table 6	Measurement performance.....	51
Table 7	Operating environment.....	52
Table 8	Inputs and outputs.....	53
Table 9	Mechanical specifications.....	53
Table 10	Measurement performance.....	54
Table 11	Operating environment.....	56
Table 12	Inputs and outputs.....	56
Table 13	Mechanical specifications.....	56
Table 14	Measurement performance.....	57
Table 15	Operating environment.....	59
Table 16	Inputs and outputs.....	59
Table 17	Mechanical specifications.....	59
Table 18	Measurement performance.....	60
Table 19	Operating environment.....	62
Table 20	Inputs and outputs.....	62
Table 21	Mechanical specifications.....	62
Table 22	Measurement performance.....	63
Table 23	Operating environment.....	65
Table 24	Inputs and outputs.....	65
Table 25	Mechanical specifications.....	65
Table 26	Measurement performance.....	66
Table 27	Operating environment.....	67
Table 28	Inputs and outputs.....	68
Table 29	Mechanical specifications.....	68
Table 30	Measurement performance.....	69
Table 31	Operating environment.....	70
Table 32	Inputs and outputs.....	70
Table 33	Mechanical Specifications.....	71
Table 34	Measurement performance.....	72
Table 35	Operating environment.....	72
Table 36	Inputs and outputs.....	73
Table 37	Mechanical specifications.....	73
Table 38	Connection cables.....	74
Table 39	Accessories.....	75
Table 40	Spare parts.....	75
Table 41	Spare parts.....	75
Table 42	Accessories.....	75
Table 43	Spare parts.....	76
Table 44	Accessories.....	76
Table 45	Spare parts.....	76

Table 46	Accessories.....	76
Table 47	Spare parts.....	77
Table 48	Accessories.....	77
Table 49	Accessories.....	77
Table 50	Spare parts.....	77
Table 51	Accessories.....	77
Table 52	Default Modbus serial communication settings.....	79
Table 53	Modbus function codes.....	79
Table 54	Interpretation of 16-bit signed integer values.....	80
Table 55	Floating point measurement data registers (read-only).....	81
Table 56	Integer measurement data registers (read-only).....	82
Table 57	Modbus configuration data registers (writable).....	84
Table 58	Modbus status data registers (read-only).....	86
Table 59	Error codes in register 0203 <sub>hex</sub> .....	87
Table 60	Modbus test registers (read-only).....	88
Table 61	Device identification objects.....	88
Table 62	Modbus exception responses.....	89



# 1. About this document

## 1.1 Version information

This document provides instructions for installing, using, and maintaining Vaisala HUMICAP® Humidity and Temperature Probes HMP3, HMP4, HMP5, HMP7, HMP8, HMP9, Moisture in Oil Probe MMP8, and Temperature Probe TMP1.

Table 1 Document versions (English)

Document code	Date	Description
<i>M212022EN-E</i>	June 2020	<p>Added content:</p> <ul style="list-style-type: none"> <li>• <a href="#">DTR502B solar radiation shield (page 27)</a></li> <li>• <a href="#">Mounting probe head inside DTR502B (page 28)</a></li> <li>• <a href="#">Diagnostics in Insight (page 32)</a></li> <li>• <a href="#">Indigo 500 series transmitters (page 37)</a></li> <li>• <a href="#">Exception responses (page 89)</a></li> <li>• <a href="#">Maintenance and calibration (page 93)</a></li> </ul> <p>Updated content:</p> <ul style="list-style-type: none"> <li>• <a href="#">Additional features with Indigo transmitters (page 12)</a></li> <li>• <a href="#">Using probe with Indigo transmitters (page 34)</a></li> <li>• <a href="#">Corrected CRC values in section Modbus communication examples (page 90)</a></li> </ul>
<i>M212022EN-D</i>	March 2020	Added content for HMP3 and MMP8 probe models.
<i>M212022EN-C</i>	June 2019	<p>Applicable from software version 1.0.9 onward. Added content for HMP9 probe model. Other added content:</p> <ul style="list-style-type: none"> <li>• <a href="#">Output parameters (page 11)</a></li> <li>• <a href="#">Adjusting measurement with Indigo 200 transmitter (page 44)</a></li> <li>• <a href="#">Problem situations (page 48)</a></li> <li>• <a href="#">Error messages (page 48)</a></li> <li>• <a href="#">Status registers (page 86)</a></li> </ul> <p>Updated content:</p> <ul style="list-style-type: none"> <li>• Updated technical specifications and dimension drawings of probe models</li> <li>• Updated presentation of Modbus register maps</li> <li>• Corrected numbering of decimal registers in section <a href="#">Measurement data registers (page 81)</a></li> </ul>

## 1.2 Related manuals

Table 2 Related manuals

Document code	Name
M211982EN	HMP3, HMP4, HMP5, HMP7, HMP8, HMP9, MMP8, and TMP1 Quick Guide
M211877EN	Indigo 201 Analog Output Transmitter User Guide
M211966EN	Indigo 202 Digital Transmitter User Guide
M212287EN	Indigo 520 Transmitter User Guide

## 1.3 Documentation conventions



**WARNING! Warning** alerts you to a serious hazard. If you do not read and follow instructions carefully at this point, there is a risk of injury or even death.



**CAUTION! Caution** warns you of a potential hazard. If you do not read and follow instructions carefully at this point, the product could be damaged or important data could be lost.



**Note** highlights important information on using the product.



**Tip** gives information for using the product more efficiently.



Lists tools needed to perform the task.



Indicates that you need to take some notes during the task.

## 1.4 Trademarks

Vaisala® and HUMICAP® are registered trademarks of Vaisala Oyj.

All other product or company names that may be mentioned in this publication are trade names, trademarks, or registered trademarks of their respective owners.

## 2. Product overview

HMP series probes are humidity and temperature measurement probes with a digital output (Modbus protocol). The probes are designed for demanding humidity and temperature measurement applications. The probes have a two-part structure, with measurement electronics contained in the probe body and sensor(s) in the probe head. The probe body and the probe head are connected by a cable. Length options for this connecting cable depend on the probe model.

The probes are compatible with Vaisala Indigo transmitters. They can also be connected to Vaisala Insight software for configuration, calibration, adjustment, diagnostics, and temporary online monitoring.

### 2.1 Probe structure

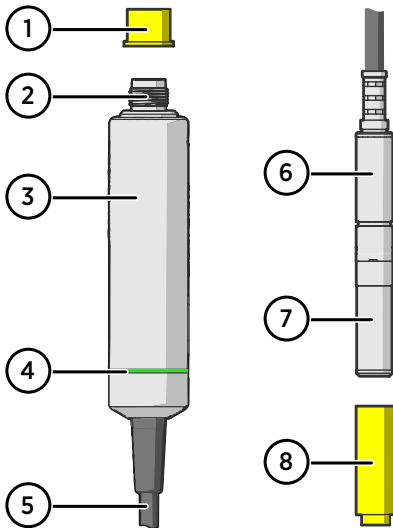


Figure 1 Probe parts

- |       |   |
|-------|---|
| 1     | Protection cap (remove before use)  |
| 2     | 5-pin M12 connector   |
| 3     | Probe body with type label  |
| 4     | Status indicator:   |
| Green | Power on and probe online, flashes when communicating   |
| Red   | Error   |
| Off   | Power off or indicator disabled   |
| 5     | Probe cable (do not cut)  |
| 6     | Probe head (HMP7 model shown)   |
| 7     | Location of sensor(s) on the probe head. Most probe models have a removable filter over the sensors that can be replaced if it gets dirty or damaged. Note that HMP9 and TMP1 do not have a removable filter. |
| 8     | Protection cap (remove before use)  |

### 2.2 Basic features and options

- Comprehensive list of output parameters. For example: relative humidity, temperature, dew point temperature, wet-bulb temperature, absolute humidity, mixing ratio, water vapor pressure, enthalpy. See [Output parameters \(page 11\)](#).
- Sensor purge provides superior chemical resistance (HMP models only)
- Probe and sensor warming functions minimize condensation on probe (HMP models only)

- Traceable calibration certificate:
  - HMP and MMP models: 6 points for humidity, 1 point for temperature
  - TMP1: 2 points for temperature
- Standalone Modbus RTU over RS-485
- Compatible with Indigo series of transmitters
- Can be connected to Vaisala Insight PC software for configuration, calibration, diagnostics, and temporary online monitoring

## 2.3 Output parameters



On HMP probe models, the values of all available output parameters are always locked when chemical purge or extra heat functions are heating the sensor.

- Output parameter is available
- ⓘ Output parameter is available but its value is locked during sensor warming or probe heating (HMP7 only) unless temperature is written to register 0334<sub>hex</sub> from an external source
- Output parameter is not available on this model

Table 3 Availability of output parameters

Output parameter	Output unit	HMP3, 4, 5, 7, 8, and 9	MMP8	TMP1
Relative humidity	%RH	ⓘ	–	–
Temperature	°C	ⓘ	●	●
Dew point temperature	°C	●	–	–
Dew/frost point temperature	°C	●	–	–
Dew/frost point temperature at 1 atm	°C	●	–	–
Dew point temperature at 1 atm	°C	●	–	–
Absolute humidity	g/m <sup>3</sup>	ⓘ	–	–
Mixing ratio	g/kg	●	–	–
Wet-bulb temperature	°C	ⓘ	–	–
Water concentration	ppm <sub>v</sub>	●	–	–
Water vapor pressure	hPa	●	–	–
Water vapor saturation pressure	hPa	ⓘ	–	●
Enthalpy	kJ/kg	ⓘ	–	–
Water activity	–	–	●	–

Output parameter	Output unit	HMP3, 4, 5, 7, 8, and 9	MMP8	TMP1
Dew point temperature difference	°C		—	—
Absolute humidity at NTP	g/m <sup>3</sup>		—	—
Water concentration in oil	ppm <sub>v</sub>	—		—
Relative saturation	%RS	—		—
Water mass fraction	ppm <sub>w</sub>		—	—

## 2.4 Additional features with Indigo transmitters

Connecting the probe to an Indigo transmitter provides a wide range of additional options for outputs, measurement viewing, status monitoring, and configuration interface access.

Examples of additional features available with Indigo 500 series transmitters:

- Touchscreen display for real-time data viewing and configuration
- Support for 2 probes simultaneously
- 4 configurable analog outputs
- 2 configurable relays
- Ethernet connection with web interface for remote access
- Modbus TCP/IP protocol

Examples of additional features available with Indigo 200 series transmitters:

- 3.5" TFT LCD color display or non-display model with LED indicator
- Digital output or 3 analog outputs (depending on the transmitter model)
- 2 configurable relays
- Wireless browser-based configuration interface for mobile devices and computers (IEEE 802.11 b/g/n WLAN)



Available features vary depending on the Indigo transmitter model. For more information on Indigo transmitters, see [www.vaisala.com/indigo](http://www.vaisala.com/indigo).

## 2.5 Safety



**WARNING!** When returning a product for calibration or repair, make sure it has not been exposed to dangerous contamination, and is safe to handle without special precautions.



**CAUTION!** Do not attempt to open the probe body. There are no user serviceable parts inside the probe body.



**CAUTION!** Do not touch the probe head with your bare hands. Touching will deposit impurities on the probe head.



**CAUTION!** Be aware that the probe head may become hot to touch when functions such as chemical purge and probe heating are active.

## 2.6 ESD protection

Electrostatic discharge (ESD) can cause immediate or latent damage to electronic circuits. Vaisala products are adequately protected against ESD for their intended use. However, it is possible to damage the product by delivering an electrostatic discharge when touching, removing or inserting any objects inside the equipment housing.

Avoid touching component contacts or connectors when working with the device.

## 2.7 Regulatory compliances

The probes are in conformity with the provisions of the following EU directives:

- RoHS Directive
- EMC Directive

Conformity is shown by compliance with the following standards:

- EN 50581: Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.
- EN 55032: Information technology equipment – Radio disturbance characteristics – Limits and methods of measurement.
- EN 61326-1: Electrical equipment for measurement, control, and laboratory use – EMC requirements – intended for use in industrial locations.

### 2.7.1 FCC Part 15 compliance statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that of the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



**CAUTION!** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### 2.7.2 Canada ICES-003 compliance statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



### 3. Installation

When you choose the installation location for the probe, consider the following:

- Verify the operating environment specification of the probe model. The probe head typically has a much wider operating temperature range than the probe body.
- If the temperature of the measured environment differs greatly from ambient temperature, the entire probe head and preferably plenty of cable must be inside the measured environment. This prevents measurement inaccuracy caused by heat conduction along the cable.
- Probe mounting options are model-specific.

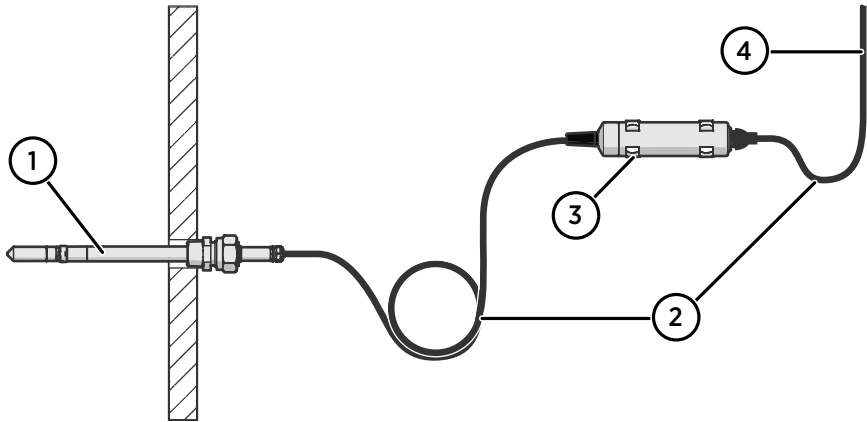


Figure 2 Example installation

- 1 Mount the probe head horizontally to prevent any water condensing on the probe head from running to the sensors.
- 2 Let the cable hang loosely to prevent condensed water from running along the cable to the probe body or probe head.
- 3 Attach the probe body to a wall or other surface using the two mounting clips (Vaisala item 243257SP) supplied with the probe. Each clip attaches to the installation surface with one screw (screw hole  $\varnothing$  4.2 mm).
- 4 Cable to Modbus master or Indigo transmitter.



**CAUTION!** The supplied mounting clips are not designed to withstand strong vibration. Use other methods to secure the probe body if necessary. For example, attach the probe body using a cable tie.

#### More information

- [Default communication settings \(page 79\)](#)

### 3.1 HMP3 probe

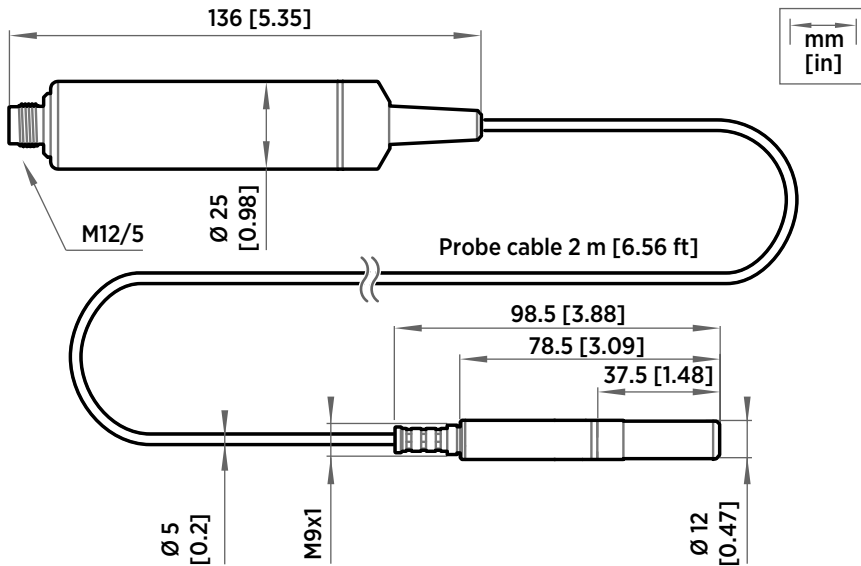


Figure 3 HMP3 probe dimensions

Vaisala HUMICAP® Humidity and Temperature Probe HMP3 is a general purpose probe designed for various industrial processes. The probe structure allows for replacing the sensor without tools, making it suitable for applications such as paint booths and other industrial applications where periodic recalibration alone is not sufficient for maintaining the probe performance. Other suitable applications include, for example, industrial HVAC systems, cleanrooms, and environmental chambers.

- Operating temperature for probe head  $-40 \dots +120 \text{ }^{\circ}\text{C}$  ( $-40 \dots +248 \text{ }^{\circ}\text{F}$ )
- Operating temperature for probe body  $-40 \dots +80 \text{ }^{\circ}\text{C}$  ( $-40 \dots +176 \text{ }^{\circ}\text{F}$ )

If purchased with a composite sensor instead of the field replaceable HUMICAP® R2 sensor, HMP3 can use the chemical purge feature. In environments with high concentrations of chemicals and cleaning agents, the chemical purge option helps to maintain measurement accuracy between calibration intervals.

#### More information

- [Mounting probe head inside DTR502B \(page 28\)](#)

### 3.2 HMP4 probe

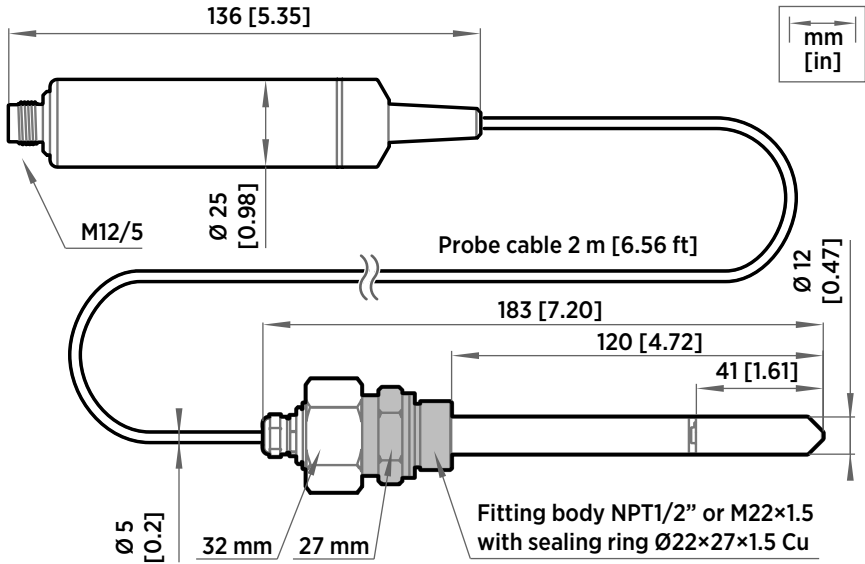


Figure 4 HMP4 probe dimensions

Vaisala HUMICAP® Humidity and Temperature Probe HMP4 is designed for high-pressure applications such as compressed air systems in maritime, breathing air, and industrial applications, where measurement performance and chemical tolerance are essential.

- Temperature measurement range  $-70 \dots +180 \text{ }^{\circ}\text{C}$  ( $-94 \dots +356 \text{ }^{\circ}\text{F}$ )
- Operating pressure  $0 \dots 10 \text{ MPa}$  ( $0 \dots 100 \text{ bar}$ )
- Operating temperature for probe body  $-40 \dots +80 \text{ }^{\circ}\text{C}$  ( $-40 \dots +176 \text{ }^{\circ}\text{F}$ )
- M22×1.5 or NPT1/2" fitting body



Use a sealing ring ( $\varnothing 22 \times 27 \times 1.5 \text{ Cu}$ ) with the M22×1.5 fitting. Replace the sealing ring every time the probe is detached. Three sealing rings are supplied with the fitting.

### 3.3 HMP5 probe

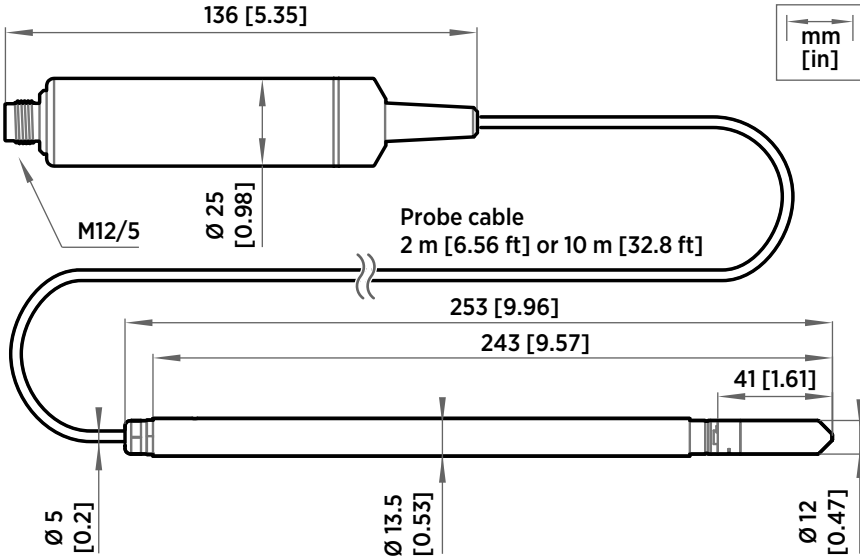


Figure 5 HMP5 probe dimensions

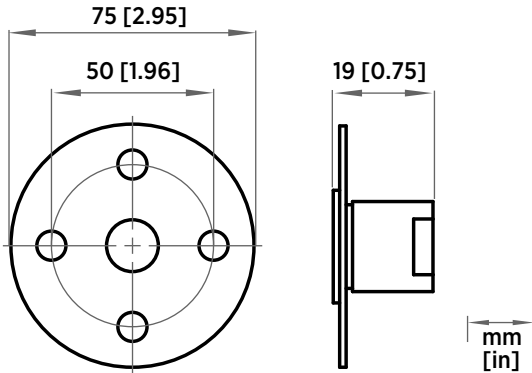


Figure 6 Optional mounting flange 210696 dimensions

Vaisala HUMICAP® Humidity and Temperature Probe HMP5 is designed for high-temperature applications such as baking ovens, pasta dryers, and industrial drying kilns, where measurement performance and chemical tolerance are essential.

- Temperature measurement range  $-70 \dots +180 \text{ }^{\circ}\text{C}$  ( $-94 \dots +356 \text{ }^{\circ}\text{F}$ )

- Operating temperature of probe body  $-40 \dots +80 \text{ }^{\circ}\text{C}$  ( $-40 \dots +176 \text{ }^{\circ}\text{F}$ )
- 250-mm (9.84 in) probe allows easy process installation through insulation

### 3.4 HMP7 probe

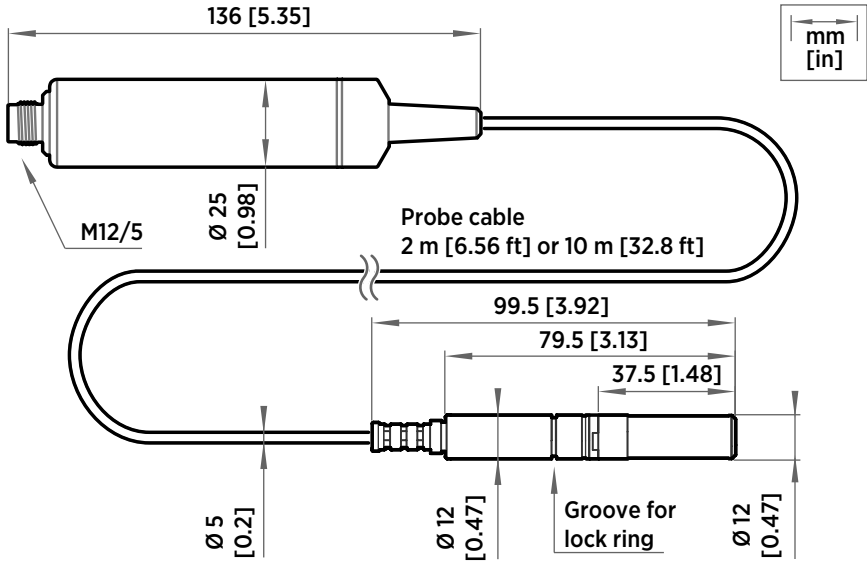


Figure 7 HMP7 probe dimensions

Vaisala HUMICAP® Humidity and Temperature Probe HMP7 is designed for applications that involve constant high humidity or rapid changes in humidity, such as drying and test chambers, combustion air, and other humidifiers and meteorological measurements, where measurement performance and chemical tolerance are essential.

- Temperature measurement range  $-70 \dots +180 \text{ }^{\circ}\text{C}$  ( $-94 \dots +356 \text{ }^{\circ}\text{F}$ )
- Operating temperature of probe body  $-40 \dots +80 \text{ }^{\circ}\text{C}$  ( $-40 \dots +176 \text{ }^{\circ}\text{F}$ )
- Probe heating and sensor warming functions minimize condensation on probe
- Vapor and pressure proof construction

#### Probe heating

HMP7 supports probe heating. Probe heating heats up not only the sensor, but the entire probe head. When probe temperature is heated above dew point temperature, condensation on the probe can be avoided while measuring the dew point temperature of the process.

If probe heating is enabled, output parameters that are dependent on temperature measurement (such as relative humidity) are locked whenever probe is heated unless the true temperature of the measured environment is updated to the temperature compensation register of the probe from another measurement instrument (for example, the TMP1 probe). Output parameters such as dew point temperature that can be measured or calculated without this external temperature information are available even without the temperature input.

#### More information

- [Mounting probe head inside DTR502B \(page 28\)](#)

### 3.5 HMP8 probe


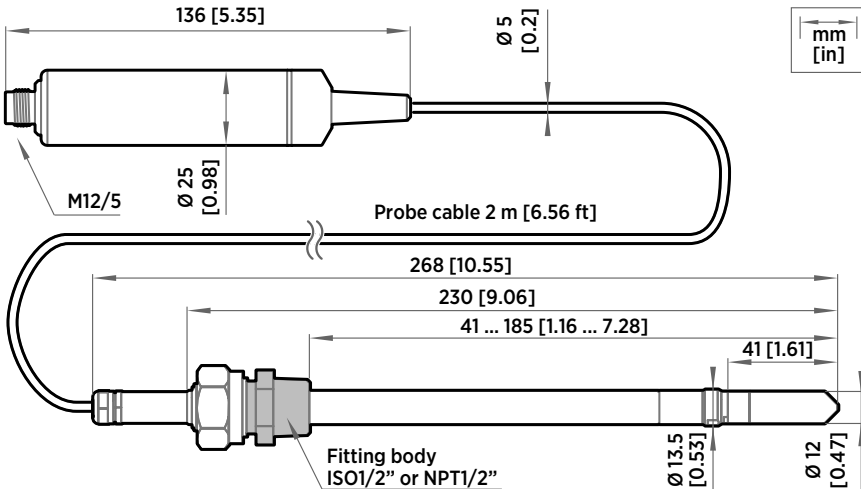


Figure 8 HMP8 probe dimensions

Vaisala HUMICAP® Humidity and Temperature Probe HMP8 is designed for pressurized applications in compressed air systems, refrigerant dryers, and other pressurized industrial applications, where easy insertion and removal of the probe and adjustable installation depth into the pipeline are needed.

- Temperature measurement range  $-70 \dots +180 \text{ }^{\circ}\text{C}$  ( $-94 \dots +356 \text{ }^{\circ}\text{F}$ )
- Operating temperature of probe body  $-40 \dots +80 \text{ }^{\circ}\text{C}$  ( $-40 \dots +176 \text{ }^{\circ}\text{F}$ )
- Operating pressure  $0 \dots 4 \text{ MPa}$  ( $0 \dots 40 \text{ bar}$ )
- Probe installation depth can be freely adjusted and probe can be hot-swapped from pressurized pipelines with an installation valve
- ISO1/2" or NPT1/2" fitting body

### 3.5.1 Attaching ball valve kit to process

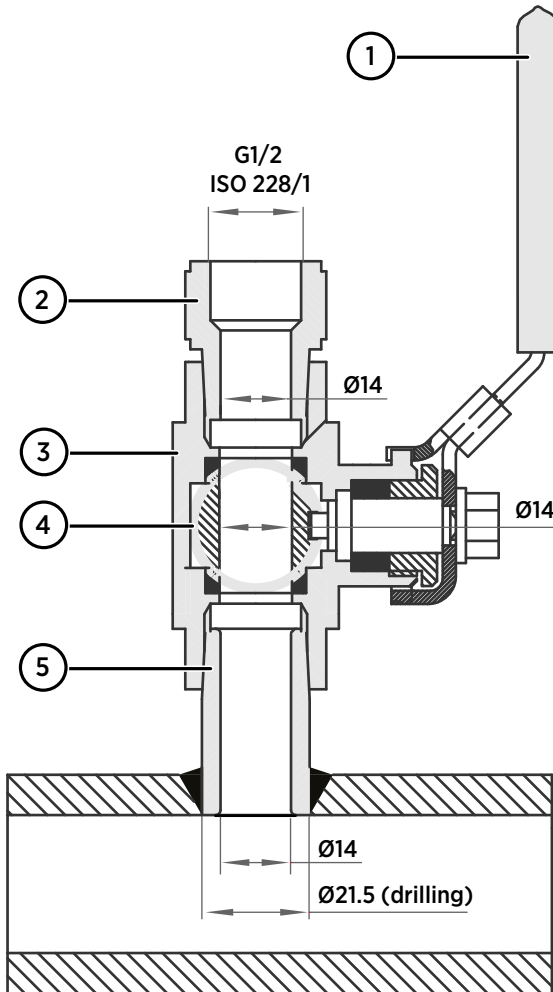

- 1 Ball valve handle: must point to the same direction as the ball valve body when installing.
- 2 Extension nipple, threads G1/2 ISO228/1 and R1/2 ISO7/1.
- 3 Ball valve body. When tightening the assembly, turn only from the ball valve body.
- 4 Ball of the ball valve.
- 5 Welding joint, threads R1/2 ISO7/1.

1. Attach the welding joint to the process pipe or chamber.
2. Apply a sealant (MEGA-PIPE EXTRA No. 7188 or LOCTITE® No. 542 with activator No. 7649) on the threads of the welding joint and screw the bottom of the ball valve onto the welding joint.
3. Tighten the ball valve assembly by turning from the ball valve body.



**CAUTION!** Tightening the ball valve kit by turning the extension nipple can break the sealing. Tighten the ball valve assembly only from the ball valve body.

4. If you need to cap the ball valve assembly before installing or after removing the probe, attach a blanking nut to close the top of the valve.

### 3.6 HMP9 probe

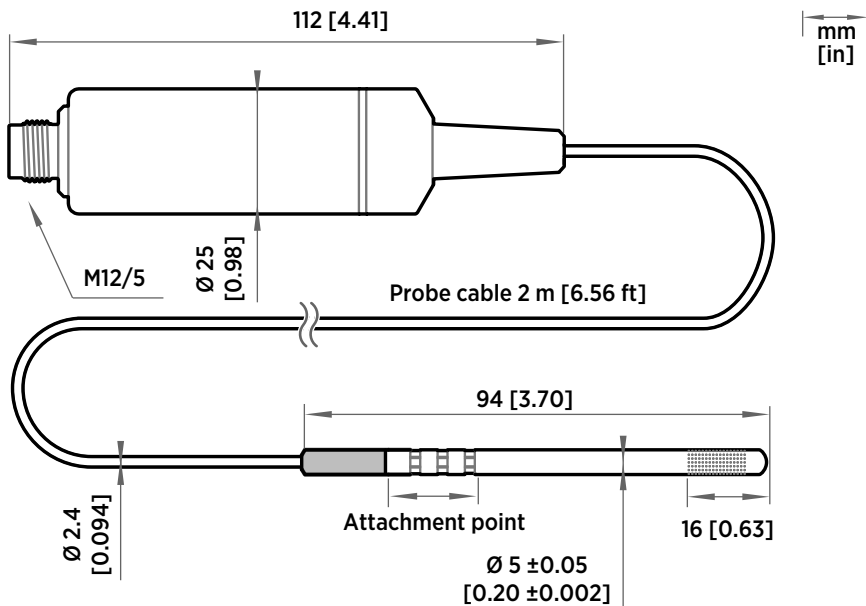


Figure 9 HMP9 probe dimensions

Vaisala HUMICAP® Humidity and Temperature Probe HMP9 is designed for easy installation into rapidly changing environments where fast response time, measurement performance, and chemical tolerance are essential.



The probe head can be mounted through thin metal walls using the included cable gland or mounting grommet. Two grommets are included: small one for 6.5 mm diameter hole, and large one for 12.5 mm diameter hole.

You can also attach the probe head directly using a zip tie. The probe head should be attached from the point near the black plastic part.

- Temperature measurement range  $-40 \dots +120 \text{ }^{\circ}\text{C}$  ( $-40 \dots +248 \text{ }^{\circ}\text{F}$ )
- Operating temperature of probe body  $-40 \dots +60 \text{ }^{\circ}\text{C}$  ( $-40 \dots +140 \text{ }^{\circ}\text{F}$ )
- Integrated filter (non-replaceable)



**CAUTION!** Do not damage the probe head by bending, crushing, or striking it. Avoid overtightening when installing the probe head through a cable gland.

#### More information

- [Mounting probe head inside DTR502B \(page 28\)](#)

### 3.6.1 Installing HMP9 through a cable gland

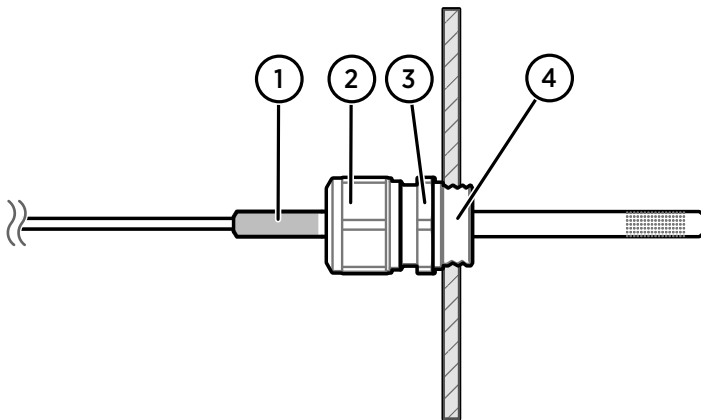


Figure 10 Installing HMP9 probe head through a cable gland

- 1 Black plastic part of the HMP9 probe head
- 2 Nut for tightening the probe in place
- 3 Base of the cable gland
- 4 M10×1.5 threads of the cable gland



- M10×1.5 cable gland (included with HMP9 probe)
- Drill with 8.5 mm bit
- M10×1.5 threading tap
- 13 mm wrench

1. Drill a 8.5 mm diameter hole in the installation location.
2. Use a threading tap to create a M10×1.5 thread in the hole.
3. Install the base of the cable gland in the hole and tighten with a 13 mm wrench.
4. Insert the seal of the cable gland in the base and place the nut of the cable gland over the probe head.
5. Insert the probe head in the cable gland up to the black plastic part of the probe head. Leave the black plastic part entirely outside the cable gland. Tighten the cable gland to finger tightness.
6. Tighten the nut of the cable gland with a 13 mm wrench until the probe head stops moving. Do not overtighten.

### 3.7 MMP8 probe

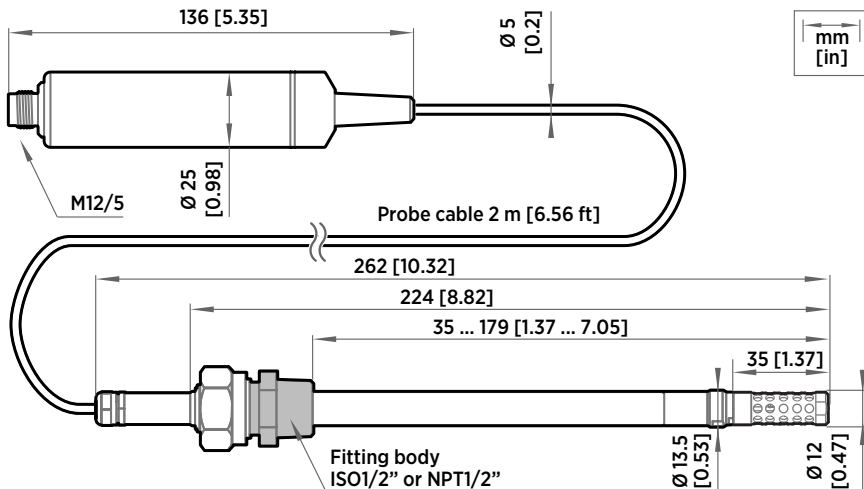


Figure 11 MMP8 dimensions

Vaisala HUMICAP® Moisture in Oil Probe MMP8 enables fast and reliable measurement of moisture in oil. It uses proven Vaisala HUMICAP® sensor that was developed for demanding dissolved moisture measurements in transformer and lubrication oils, hydraulic fluids, and other liquids.

MMP8 measures dissolved moisture in oil in terms of the water activity ( $a_w$ ), relative saturation (%RS), and temperature (T). Water activity or relative saturation indicate directly whether there is a risk of free water formation. This data is relevant in lubrication oil applications where detecting water ingress and preventing free water formation is crucial. The measurement is independent of oil type and age.

MMP8 can also output ppm, the average mass concentration of water in oil. Vaisala has this conversion readily available for specific oils, including mineral transformer oil. This allows continuous measurement of ppm concentration in power transformer condition monitoring.

- Temperature measurement range  $-40 \dots +180 \text{ }^{\circ}\text{C}$  ( $-40 \dots +356 \text{ }^{\circ}\text{F}$ )

When installed with the ball valve kit, the MMP8 is ideal for installation into processes where the probe needs to be installed or removed while the process is running. Probe installation depth is adjustable. Pressure fitting options are ISO 1/2" and NPT 1/2". MMP8 is delivered with a manual pressing handle that allows the probe to be pushed against process pressure.

For installation instructions of the ball valve see [Attaching ball valve kit to process \(page 21\)](#).

### 3.8 TMP1 probe

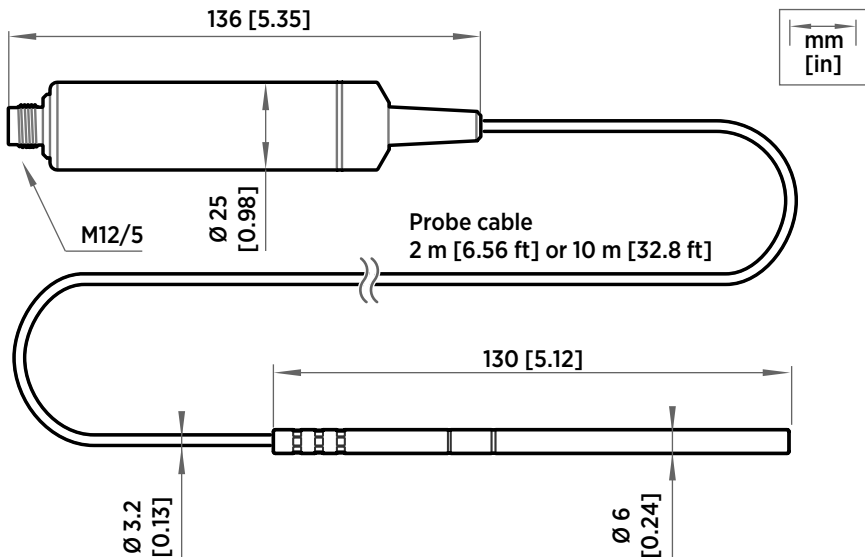


Figure 12 TMP1 probe dimensions

Vaisala Temperature Probe TMP1 is designed for demanding temperature measurements in industrial applications such as pharmaceutical industry and calibration laboratories, where accuracy and robustness are essential.

- Temperature measurement range -70 ... +180 °C (-94 ... +356 °F)
- Operating temperature of probe body -40 ... +80 °C (-40 ... +176 °F)

### 3.9 Wiring

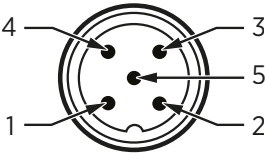


Figure 13 M12 5-pin A-coded male connector pinout

Pin #	Function	Notes	Wire colors in Vaisala cables
1	Power supply	Operating voltage: <ul style="list-style-type: none"><li>• HMP7: 18 ... 30 VDC</li><li>• Other models: 15 ... 30 VDC</li></ul> Current consumption: 10 mA typical, 500 mA max.	Brown
2	RS-485 -		White
3	Power GND and RS-485 common		Blue
4	RS-485 +		Black
5	Not connected		Gray

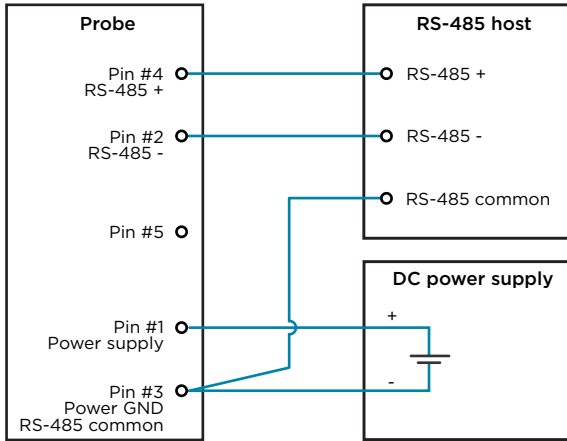


Figure 14 RS-485 wiring



Recommended maximum length of the RS-485 line is 30 m (98 ft).

### 3.10 DTR502B solar radiation shield

DTR502B protects the sensors on the probe head from solar radiation and precipitation in outdoor installations. It provides excellent ventilation while blocking both direct and reflected solar radiation. The special plastic used in the plates has excellent thermal characteristics, the white outer surface reflects radiation, the black inside absorbs accumulated heat. The shield can be easily installed on either a vertical pole, horizontal beam, or a flat surface.

DTR502B is compatible with the probe heads of HMP3, HMP7 and HMP9 probes. HMP9 requires the use of a special sensor head support (item code 215130) due to the smaller diameter of its probe head.



DTR502B is designed to hold only the **probe head**. The probe body must be separately mounted and protected in outdoor installations. If possible, mount the probe indoors and bring only the probe head outside, into the DTR502B.

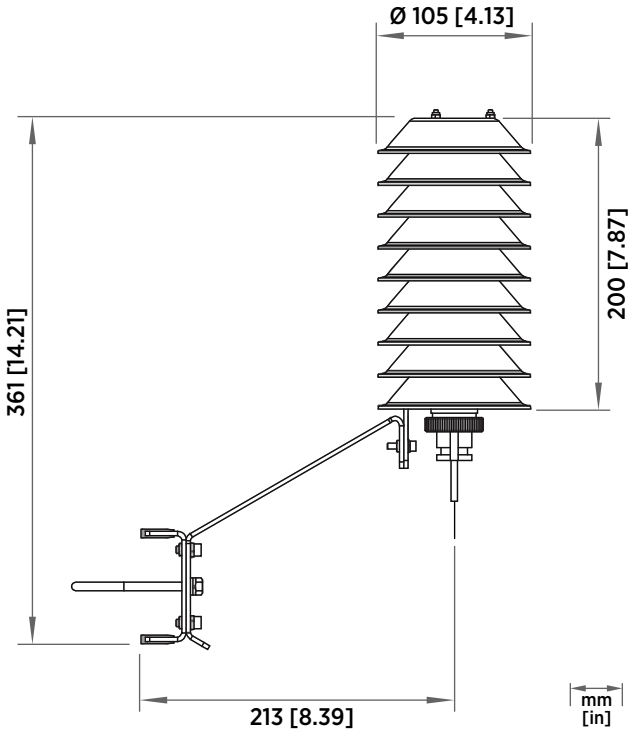


Figure 15 DTR502B dimensions

### 3.10.1 Mounting probe head inside DTR502B



- 3-mm and 5-mm Allen keys
- Crosshead screwdriver

DTR502B solar radiation shield is compatible with the probe heads of HMP3, HMP7, and HMP9 probes. The sensor head support that is included with the DTR502B is suitable for attaching HMP3 and HMP7 probe heads, but for HMP9 you need an alternate sensor head support (item code 215130).

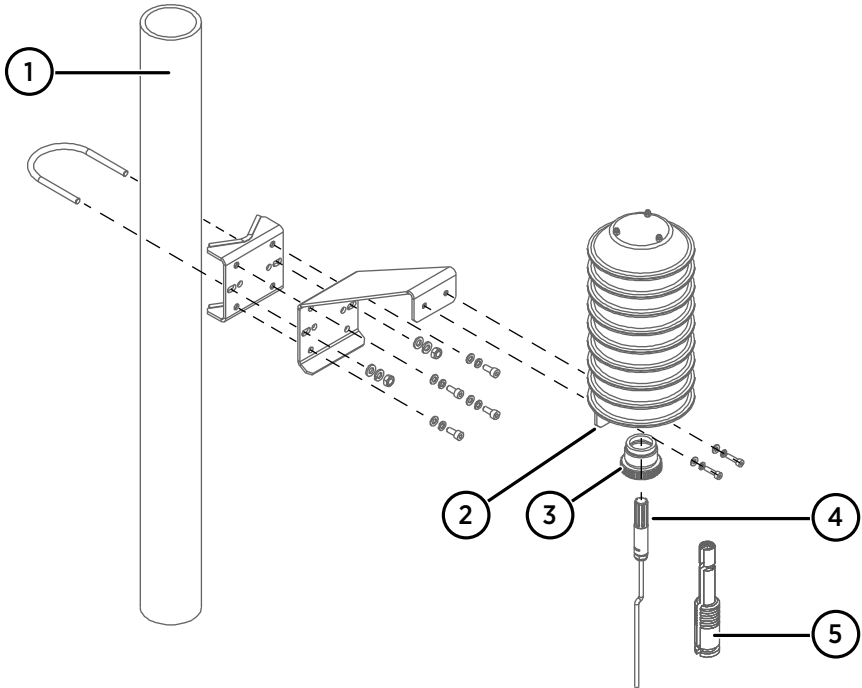


Figure 16 Mounting DTR502B on a pole mast

- 1 Pole mast with diameter 30 ... 60 mm (1.2 ... 2.3 in)
- 2 Support plate
- 3 Fastening ring
- 4 Probe head
- 5 Sensor head support

- 1. Mount the solar radiation shield in the measurement location using the provided mounting accessories, screws, and washers. You can mount the radiation shield to a pole mast as shown in [Figure 16 \(page 29\)](#), or to a horizontal beam directly from its support plate.

2. Attach the probe head to the sensor head support and secure it with a cable tie. The alternate sensor head support (item code 215130) needed with HMP9 is shown in [Figure 17](#) ([page 30](#)).

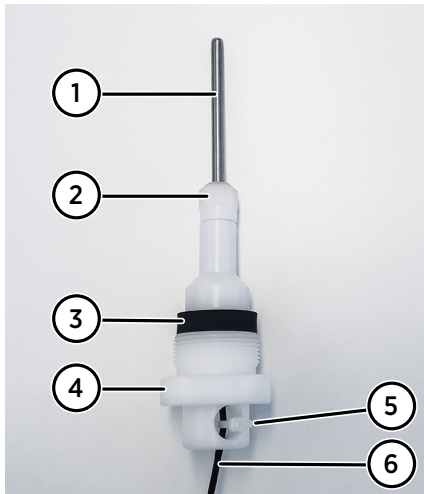


Figure 17 HMP9 probe head with sensor head support 215130

- 1 HMP9 probe head
  - 2 Mounting nut
  - 3 Sealing ring
  - 4 Fastening ring
  - 5 Cable tie
  - 6 Cable between probe head and probe body
3. Insert the fastening ring and the sealing ring on the probe head.
  4. Slide the probe head into the radiation shield and tighten the sealing ring.



## 4. Configuration with Insight software

### 4.1 Vaisala Insight software

Vaisala Insight software is a configuration software for Indigo-compatible devices. With the Insight software, you can:

- See probe information and status
- See real-time measurement
- Record data up to 48 hours and export in CSV format
- Calibrate and adjust the probe
- Configure probe features such as measurement filtering, chemical purge, heating, and serial communication

Microsoft Windows® operating system and Vaisala USB cable (no. 242659) required.

Download Vaisala Insight software at [www.vaisala.com/insight](http://www.vaisala.com/insight).

### 4.2 Connecting to Insight software



- Computer with Microsoft Windows® operating system and Vaisala Insight software installed
- USB connection cable (no. 242659)



**CAUTION!** When connecting several devices at the same time, note that your computer may not be able to supply enough power through its USB ports. Use an externally powered USB hub that can supply >2 W for each port.

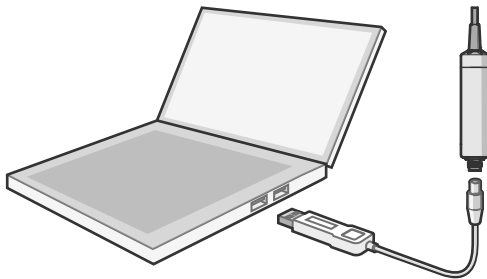



Figure 18 Connecting probe to Insight

1. Open Insight software.
2. Connect the USB cable to a free USB port on the PC or USB hub.

3. Connect the probe to the USB cable.
4. Wait for Insight software to detect the probe.

## 4.3 Configuration options

Select  > **Configure Device** to access configuration options in Insight software.

Available configuration options include all of the Modbus configuration registers (see [Configuration registers \(page 84\)](#)) and several additional options. Insight software is the recommended way to change the probe configuration.



You can restore the probe back to its default settings using the **Factory default settings > Restore settings** function. Doing this will also clear any user adjustment and restore the latest factory calibration.

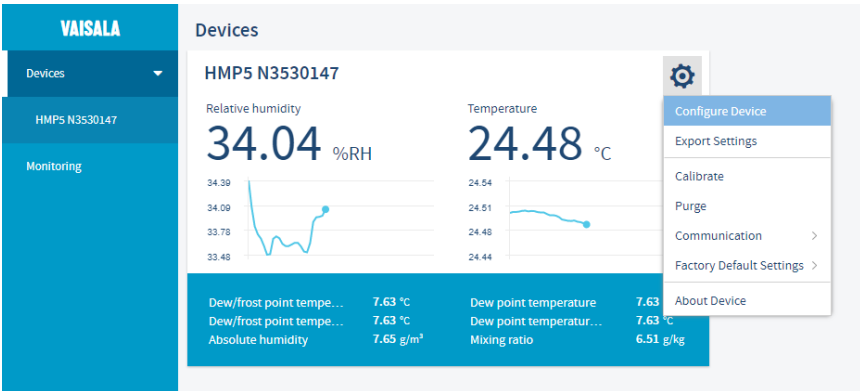


Figure 19 HMP5 in Insight software

## 4.4 Diagnostics in Insight

Messages sent by the connected devices are shown automatically in Insight. Additional diagnostic data is available on the **Diagnostics** page. The data available depends on the probe model and Insight operating mode (basic or advanced). The data can be very useful when diagnosing issues together with Vaisala support, particularly the diagnostic files.

### Diagnostic files

If Insight is in **Advanced Mode**, you can retrieve the following diagnostic files from the connected probe:

- **SSR/T histogram:** Table of humidity and temperature conditions measured by the probe
- **Error log:** Cumulative total of the error and status events tracked by the probe

Both files contain data from since the probe was manufactured, or since the files were last cleared. Clearing the files is not recommended unless instructed by Vaisala support. The buttons to clear the files are located at the bottom of the **Diagnostics** page.

The files are in comma separated value (CSV) format. They can be opened for viewing in spreadsheet programs such as Microsoft Excel or in text editors.

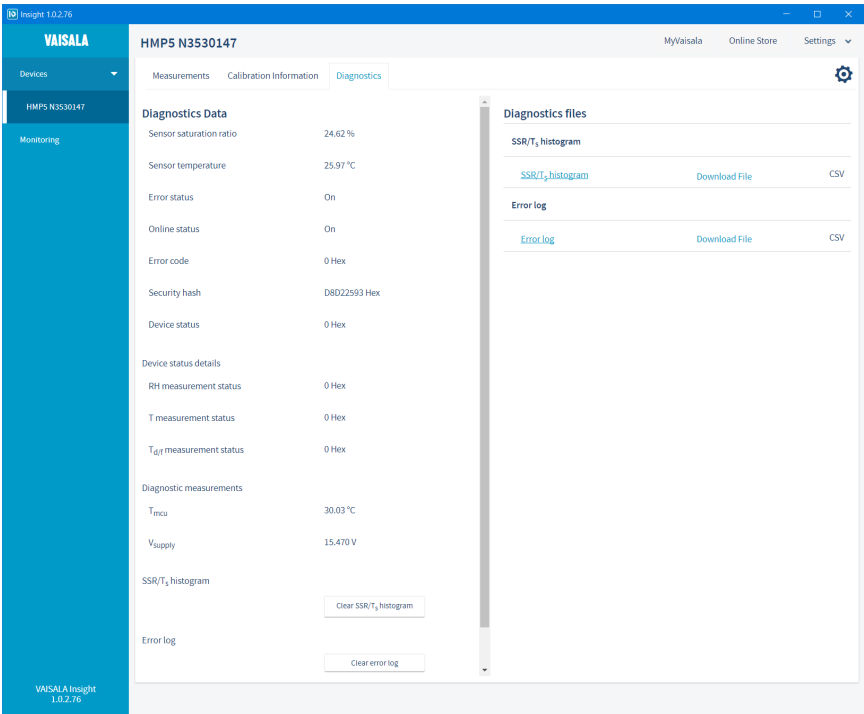


Figure 20 HMP5 diagnostics in Insight (advanced mode)

## 5. Using probe with Indigo transmitters

Indigo transmitters are host devices that extend the feature set of connected probes with a range of additional options for outputs, configuration access, measurement viewing, and status monitoring.

Available features vary depending on the transmitter model. Models without display use a LED indicator for notifications.

### 5.1 Indigo 200 series transmitters

Indigo 200 series transmitters have a probe connector where compatible probes can be attached directly. A cable may also be used to connect the probe.

After connecting the probe, use the wireless configuration interface to configure the transmitter.

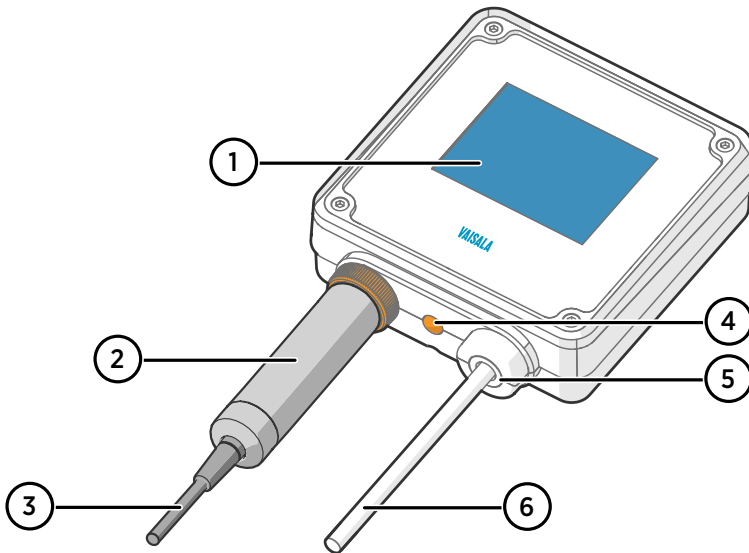


Figure 21 Probe attached to Indigo 200 series transmitter directly

- 1 3.5" TFT LCD color display: non-display option with LED available for certain models
- 2 Locking wheel: insert probe, hold in place, and turn the wheel counterclockwise
- 3 Cable to probe head
- 4 Wireless configuration interface (WLAN) activation button
- 5 Rubber lead-through with strain relief. Cable feedthrough option also at back of transmitter.
- 6 Input/output cable

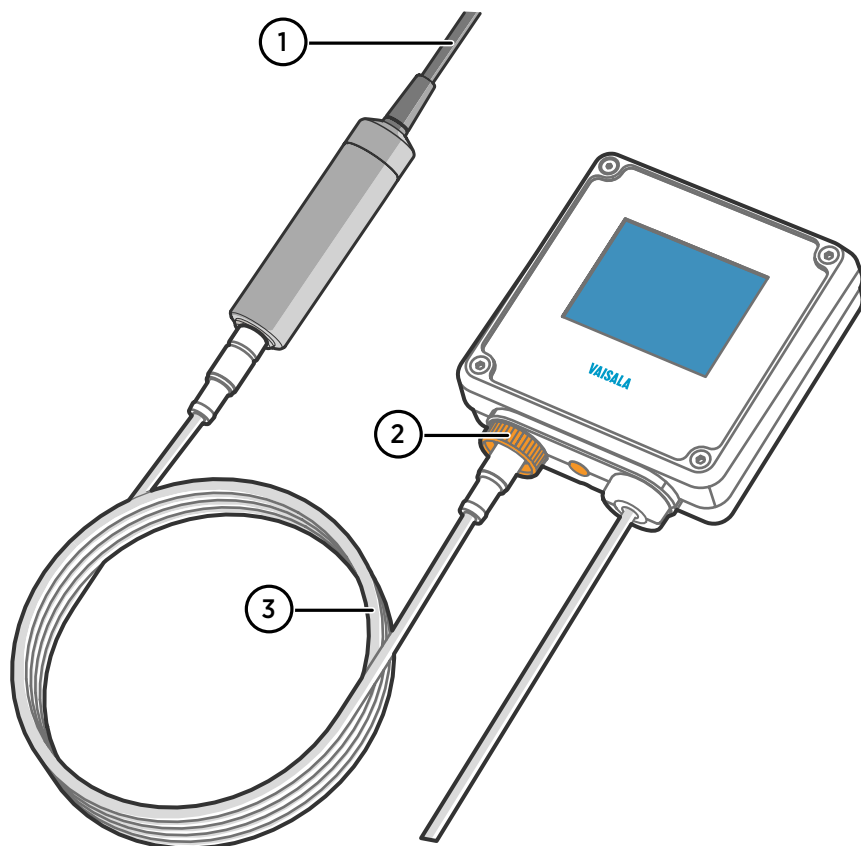


Figure 22 Probe attached to Indigo 200 series transmitter with a cable

- 1 Cable to probe head
- 2 Locking wheel: insert cable, hold in place, and turn the wheel counterclockwise
- 3 Connection cable

## 5.1.1 Attaching probe to Indigo 200 series transmitter

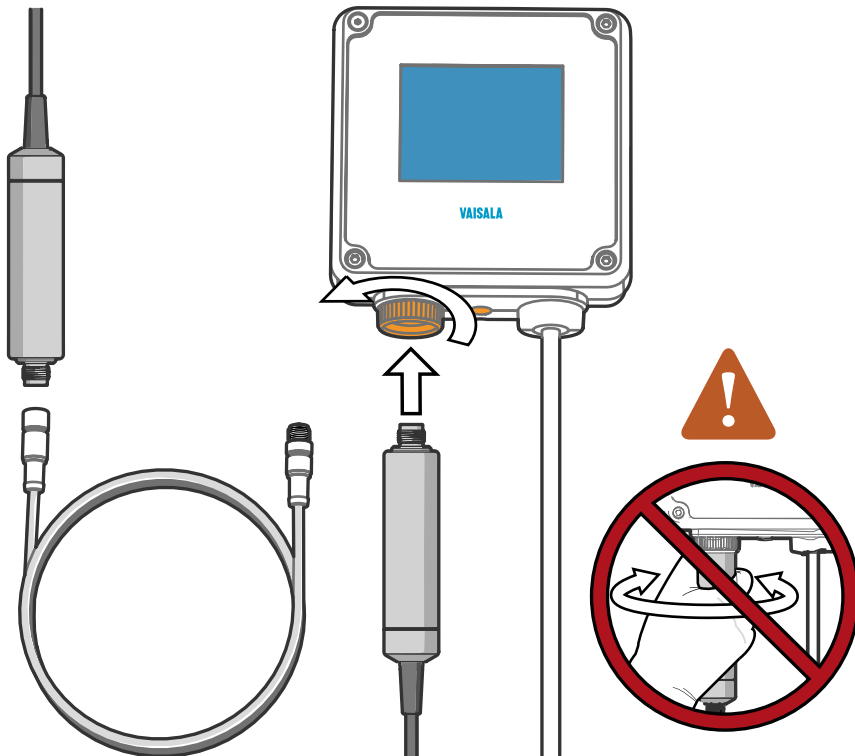


Figure 23 Attaching the probe to Indigo 200 series transmitter

1. Insert the probe or the connection cable into the transmitter's connector. Use of connection cable is recommended for strain relief.
2. Turn the locking wheel of the transmitter to lock the probe or cable in place.  
**Do not turn the probe or the cable itself**, as that will damage the connectors.
3. If you are using a connection cable, connect the probe to the cable.
4. When the transmitter recognizes the connected probe, it shows a notification message on the display.

## 5.2 Indigo 500 series transmitters

Probes are connected to Indigo 500 series transmitters using a cable. Connections are made to the screw terminals inside the housing. Indigo 520 model allows two probes to be connected.

After connecting a probe, use the touchscreen interface or the web user interface to configure the transmitter.

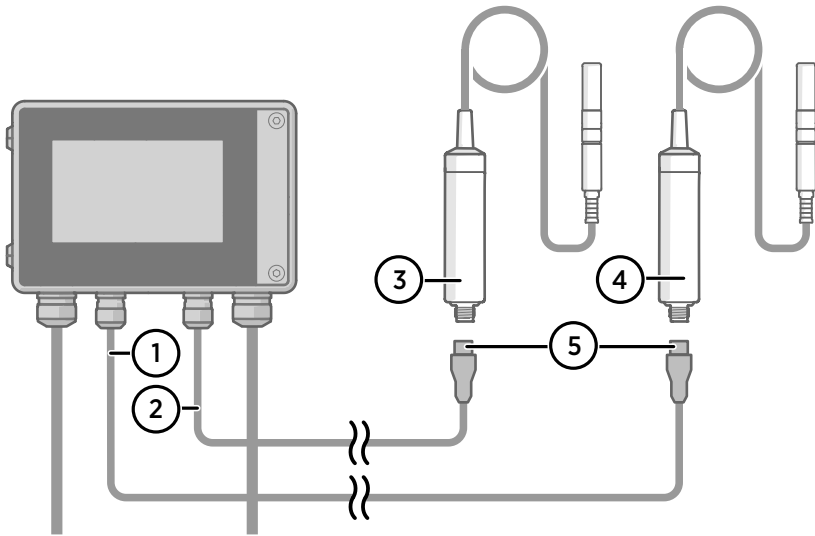


Figure 24 Attaching probes to Indigo 500 transmitter

- 1 Probe connection cable, probe 1
- 2 Probe connection cable, probe 2
- 3 Probe to be connected as probe 2
- 4 Probe to be connected as probe 1
- 5 Probe cable connector (5-pin M12)

# 6. Maintenance

## 6.1 Cleaning the probe



**CAUTION!** Do not attempt to clean the sensors under the filter in any way.



Do not spray anything directly on the probe head, since that may deposit impurities on the sensors.

You can clean the probe, probe body, and cable by wiping them with a soft, lint-free cloth moistened with water or a suitable cleaning agent, such as isopropyl alcohol. Do not wipe the filter: wiping the filter may block its pores and/or deposit residue on the filter. If the filter is heavily contaminated, replace it.

When cleaning, follow these precautions:

- Avoid touching the filter. If you need to touch the filter, always wear clean gloves (cotton, rubber or similar material). Keep the filter free of any grease or oil.
- Do not scrape the probe or the probe body.
- Do not immerse the probe or the probe body in liquid to clean them.
- Wipe cleaning agents off the probe, probe body, and the cable after cleaning.

After cleaning the probe, it is recommended to perform a chemical purge.

### 6.1.1 Chemical tolerance



Avoid exposing the probe to cleaning agents for unnecessarily long periods of time.

Table 4 Suitability of cleaning agents

Cleaning Agent	Suitability
Acetone	Suitable
Chlorine disinfectants	Suitable
Ethanol	Suitable
Heptane	Suitable
Isopropyl alcohol	Suitable



## 6.2 Changing the probe filter



- New compatible filter
- Clean lint-free gloves



**CAUTION!** Sensors are easily damaged when the filter is not in place. Handle the probe head carefully.



HMP9 and TMP1 probe models do not have a removable filter.

- ▶ 1. Put on clean gloves before touching the filter.
2. Turn the filter counter-clockwise to loosen it.
3. Remove the filter from the probe head. Be careful not to touch the sensors with the filter.
4. Install a new filter on the probe head. Tighten the filter properly (recommended force 5 Nm).

## 6.3 Replacing the HUMICAP R2 sensor



- New HUMICAP® R2 sensor
- New compatible filter
- Clean lint-free gloves
- 11.3 %RH and 75.5 %RH humidity references (using Vaisala HMK15 Humidity Calibrator)
- Computer with Microsoft Windows® operating system and Vaisala Insight software installed
- USB connection cable (no. 242659)

Follow this procedure to replace a HUMICAP® R2 humidity sensor if it has been damaged, or normal adjustment is not sufficient to restore the humidity measurement accuracy. It is recommended that you replace the filter at the same time. The procedure includes a special 2-point adjustment of humidity measurement using Insight PC software. This adjustment must be done every time after the HUMICAP® R2 sensor has been replaced.



**CAUTION!** Only the HUMICAP® R2 sensor is designed to be replaced by the user. Other humidity sensor types available for HMP series probes are composite sensors where the humidity sensor and temperature sensor are permanently attached together. If you need to replace a composite sensor, contact a Vaisala Service Center.



**CAUTION!** Sensors are easily damaged when the filter is not in place. Handle the probe head carefully.



**CAUTION!** Reverting the probe to factory settings clears the adjustment values entered in this procedure. If you need to revert the probe to factory settings after replacing the sensor yourself, write down the values on the **Adjustment data** page beforehand, and enter them again after applying the factory settings.

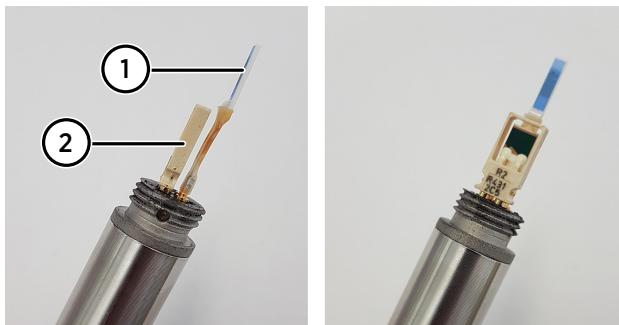


Figure 25 HMP3 probe head with filter removed


- 1 Pt100 temperature sensor
- 2 HUMICAP® R2 humidity sensor

- ▶ 1. Put on clean gloves before touching the filter.
- 2. Turn the filter counter-clockwise to loosen it.
- 3. Remove the filter from the probe head. Be careful not to touch the sensors with the filter.
- 4. There are two sensors under the filter, the HUMICAP® sensor and a temperature sensor. Identify the HUMICAP® sensor and make sure it is of the R2 type (temperature sensor not attached to it).

5. Pull out the old HUMICAP® R2 sensor and insert the new one.



**CAUTION!** Handle the new sensor by the plastic frame. Do not touch the sensor element in the middle of the sensor. Do not touch the temperature sensor.

6. Open Insight software.
7. Select **Settings > Advanced Mode**.
8. Connect the probe to Insight. See [Connecting to Insight software \(page 31\)](#).
9. Select  **> Calibrate > Yes** to switch the probe to calibration mode.
10. Select **Adjustment data**.
11. Adjust the 11.3 %RH point (dry end):
  - a. Insert the probe head in the 11.3 %RH reference.
  - b. Wait for the measurement to stabilize fully.
  - c. Click table cell A1 under **RH adjustment data** and enter the value of the humidity reference (**11 . 3**).
  - d. Click table cell B1 and enter the %RH measured by the probe.
12. Adjust the 75.5 %RH point (wet end):
  - a. Insert the probe head in the 75.5 %RH reference.
  - b. Wait for the measurement to stabilize fully.
  - c. Click table cell A2 and enter the value of the humidity reference (**75 . 5**).
  - d. Click table cell B2 and enter the %RH measured by the probe.
13. Click outside the table to commit the adjustment.
14. Remove the probe head from the calibration reference and install a new filter. Tighten the filter properly (recommended force 5 Nm).
15. Select the **Calibration information** tab and update the **Calibration date** and **Calibration text**.
16. Select **Close > Yes** to exit the calibration mode.

## 6.4 Calibration and adjustment

The probe is fully calibrated and adjusted as shipped from the factory. To maintain the accuracy of the measurement, calibrate and adjust the probe as needed. Typical calibration interval is one year, but depending on the application it may be necessary to check the accuracy more frequently.

When adjustment is necessary, you can have Vaisala calibrate and adjust the probe. To order calibration services from Vaisala, visit [store.vaisala.com](https://store.vaisala.com). You can also do the adjustment yourself using the Insight software.



**WARNING!** When returning a product for calibration or repair, make sure it has not been exposed to dangerous contamination, and is safe to handle without special precautions.



If you think the device is not measuring correctly, calibration and adjustment is not the first thing to do. Check the following first:

- Make sure nothing is interfering with the measurement: heat sources, temperature differences, or condensation.
- Check that there is no moisture on the probe. If the sensor has become wet, wait for it to dry.
- Always wait for the measurement to stabilize.



**Calibration** means comparing the measurement output of the device to a known reference, such as a known environment in a calibration chamber or the output of a reference instrument. Correcting the reading of the device so that it measures accurately is referred to as **adjustment**.

## 6.4.1 Adjustment points and requirements

You can adjust the humidity measurement in 1 ... 5 points, and temperature measurement in 1 ... 2 points. Note the following:

- Humidity adjustment in more than two points is available when using Insight software in **Advanced Mode**.
- If you are adjusting in more than one humidity point, make sure the first two points are at least 10 %RH apart.
- The probe will reject adjustments that are too large, that is, greater than 10 %RH for humidity and 0.5 °C for temperature. If the probe appears to need such a large correction, perform a sensor purge and repeat the adjustment procedure. Make sure the measurement has stabilized and the reference environment is reliable. If the required adjustment is still too large, the probe needs to be serviced by Vaisala.



When adjustment of humidity measurement is necessary, Vaisala recommends adjusting in two points, 11 %RH and 75 %RH. These humidities can be produced using the Vaisala HMK15 Humidity Calibrator. Adjustment of temperature measurement is typically not necessary.



## 6.4.2 Adjusting measurement with Insight software



- Computer with Windows operating system and Vaisala Insight software installed
- Vaisala USB cable 242659 for connecting the probe
- Reference environment(s) for producing the desired humidity and/or temperature

This procedure can be used to adjust the probe's humidity or temperature measurement. If you want to adjust both, repeat the procedure.

Because stabilization of temperature and humidity takes time, you should expect the adjustment procedure to take at least 30 minutes for each adjustment point.

1. Connect the probe to Insight. See [Connecting to Insight software \(page 31\)](#).
2. If you intend to adjust humidity measurement, first select  > **Purge** to perform a chemical purge to condition the sensor. Wait a few minutes for purge to complete.
3. Select  > **Calibrate** > **Yes** to switch the probe to calibration mode.  
In calibration mode, the device will not use functions that may interfere with calibration and adjustment.
4. Select the type of adjustment to perform: **RH adjustment** or **T adjustment**.
5. Define the needed adjustment for the first measurement point:
  - a. Insert the probe head in the reference environment for the first calibration point.
  - b. Wait for the measurement to stabilize fully.
  - c. Click the **Reference value, point 1** text box and enter the reference value of the calibration point. Press **ENTER** or click outside the text box when done.
  - d. The probe automatically enters the measured values for the calibration point.
6. If you want to adjust in more than one point, repeat [step 5](#) for all desired calibration points.



You can adjust humidity measurement in up to five points when Insight is set to **Advanced mode**.

7. Select **Activate adjustment** > **Yes** to store the adjustment in the probe.
8. Check the message that appears at the top of the screen. If the message indicates that the adjustment is activated successfully, your adjustment is stored in the probe.
9. Select the **Calibration information** tab and update the **Calibration date** and **Calibration text**.
10. Select **Close** > **Yes** to exit the calibration mode.

### 6.4.3 Adjusting measurement with Indigo 200 transmitter



- Indigo 200 transmitter
- Reference environment(s) for producing the desired humidity and/or temperature (see [Adjustment points and requirements \(page 42\)](#) for more information)
- Mobile device or computer with an internet browser and a Wi-Fi connection
- Connection cable for connecting the probe to Indigo 200 transmitter (optional)

This procedure can be used to adjust the humidity or temperature measurement of an Indigo-compatible HMP or TMP-series probe. Because stabilization of temperature and humidity takes time, you should expect the adjustment procedure to take at least 30 minutes for each adjustment point.



This procedure assumes the Indigo 200 transmitter is powered on and the probe is connected to it. Refer to the user guide of your Indigo 200 transmitter model for instructions on connecting probes. The user guide also provides more detailed instructions for operating and troubleshooting the wireless connection.

- ▶ 1. Connect to the wireless configuration interface of the Indigo 200 transmitter:
  - a. Press the wireless connection activation button on the bottom of the transmitter.
  - b. Open the wireless connection menu in your mobile device or computer and select **Indigo\_ID[xx]** (transmitter-specific SSID) from the list of available connections.
  - c. If the wireless configuration interface does not launch automatically on your device, start your browser application manually and navigate to address **192.168.1.1**.
  - d. Log in to the interface:
    - User name: **Admin**
    - Password: **12345** (default)



Stay close to the transmitter for a strong wireless signal and the possibility to read on-screen messages from the transmitter's display (display models only). Starting with Indigo 200 firmware version 1.4.0, messages from the probe are also shown through the wireless configuration interface.

2. To adjust humidity measurement:

- a. If your probe supports the chemical purge feature, wait for the start-up purge to finish or start the purge manually from **Calibration > Configuration > Purge**. Measurement will be frozen for the duration of the purge. Continue when the measured values are changing again.
- b. Select the **Calibration** tab and select **Start calibration** to start the calibration mode.
- c. In the **RH adjustment** section of the page, select **Restore factory adjustment** to remove any existing non-factory adjustments.
- d. Insert the probe head in the reference environment for RH adjustment point 1 (dry point, recommendation 0 ... 35 %RH).
- e. Wait for the RH and temperature measurements to stabilize fully. This may take more than 30 minutes. Monitor the readings to see when the measurement has stabilized.
- f. Enter the value of the first reference into the **Reference value, point 1** field. Select outside the text box when done. The probe automatically enters the measured values for the calibration point.
- g. If you want to adjust humidity measurement in two points, repeat steps [step 2.d](#) ... [step 2.f](#) for RH adjustment point 2 (wet point, recommendation 65 ... 85 %RH).
- h. Select **Activate adjustment** to store the adjustment in the probe.



When the adjustment is successful, the fields for reference and measured values are cleared. The message **%0 adjustment activated successfully** appears on the local display (display models only). If the adjustment fails, the fields are not cleared. A message on the transmitter's display will indicate the reason. For example, if the humidity adjustment would be over the maximum 10 %RH allowed by the probe, the message **Cumulative adjustment too large** appears on the local display.

VAISALA

Measurements

Status

Calibration

Settings ▶

Admin

Calibration

Configuration

Diagnostics

Measurements

Start calibration

Calibration information

Calibration date2019-02-03

Calibration textVaisala / HEL

Calibration expiry date2020-02-03

Calibration interval12 months

Calibration reminder on/offOn

RH adjustment

Reference value, point 1%RH

Measured value, point 1%RH

Reference value, point 2%RH

Measured value, point 2%RH

Activate adjustment

Restore factory adjustment

Figure 26 Calibration page in the Indigo 200 wireless configuration interface



3. To adjust temperature measurement:
  - a. If you did not adjust humidity measurement, select the **Calibration** tab and select **Start calibration** to start the calibration mode.
  - b. In the **T adjustment** section of the page, select **Restore factory adjustment** to remove any existing non-factory adjustments.
  - c. Insert the probe head in the reference environment for T adjustment point 1.
  - d. Wait for temperature measurement to stabilize fully. This may take more than 30 minutes. Monitor the reading to see when the measurement has stabilized.
  - e. Enter the value of the first reference into the **Reference value, point 1** field. Select outside the text box when done. The probe automatically enters the measured value for the adjustment point.
  - f. If you want to adjust temperature measurement in two points, repeat steps [step 3.c](#) ... [step 3.f](#) for T adjustment point 2.
  - g. Select **Activate adjustment** to store the adjustment in the probe.
4. In the **Calibration information** section of the page, update the **Calibration date** and **Calibration text** fields.
5. Select **Stop calibration** to end the calibration mode.

## 7. Troubleshooting

### 7.1 Problem situations

Table 5 Troubleshooting table

Problem	Possible cause	Solution
Measurement output seems incorrect	Installation location is not representative of actual conditions you want to measure	Verify the installation location and relocate the probe if necessary.
	Heat conduction along probe head and cable is interfering with measurement accuracy	Follow the installation recommendations for cases when temperature of measured environment differs greatly from ambient. See <a href="#">Installation (page 15)</a> .
	Probe is in need of adjustment	Calibrate and adjust the probe. See <a href="#">Calibration and adjustment (page 41)</a> .
Probe status indicator LED is red	Probe is in error state	Connect the probe to Insight software or an Indigo transmitter and read the error message(s). See <a href="#">Vaisala Insight software (page 31)</a> and <a href="#">Error messages (page 48)</a> .
Values of measurement parameters stop changing for a few minutes	Probe is performing a sensor heating function such as chemical purge or waiting for the sensor to cool down	Wait for the function to complete and measurement parameters to be available again

### 7.2 Error messages

The error messages are categorized according to the severity of the status:

- **Critical errors** are fatal to the operation of the device. It may not be able to respond to communication at all, and will not measure correctly.
- **Errors** prevent normal operation of the device. Depending on the problem, errors may resolve themselves. For example, a completely wet humidity sensor may cause a humidity measurement error.
- **Warnings** do not prevent normal operation but may indicate possible problems.
- **Status** indicates a known state of the device.

Error message	Description	Recommended action
Critical errors		
Firmware checksum mismatch	Firmware is corrupted	Contact Vaisala technical support
Factory default settings corrupted	Parameter memory is corrupted	
Main configuration settings corrupted		
Additional configuration settings corrupted		
Device settings corrupted		
Sensor coefficients corrupted		
Non-volatile memory read write failure	Hardware fault	
Errors		
Temperature measurement error	Readings from sensors missing or out of range	Inspect probe head and sensors visually. If the probe is completely wet, allow it to dry out.
Humidity measurement error		
Humidity sensor failure		If the sensors are damaged or missing and the error message(s) stay active, contact Vaisala to have the probe repaired.
Capacitance reference error	Hardware fault	Contact Vaisala technical support
Ambient temperature out of range	Probe body too hot or cold	Relocate the probe body so that its ambient temperature is within the specified operating range
Supply voltage out of range	Supply voltage too high or low	Check supply voltage
Sensor heater error	Hardware fault	Contact Vaisala technical support
Warnings		
Calibration certificate checksum mismatch	Certificate stored in the probe has an invalid checksum	Contact Vaisala technical support
Calibration has expired	Shown by calibration reminder functionality	Calibrate the probe and update the calibration date information

Warnings		
Supply voltage too low for probe heating	Probe heating enabled but supply voltage is too low to use it	This warning is expected when probe heating is enabled and the probe is connected to Insight software using an USB cable. The operating voltage provided by the cable is not sufficient for probe heating.  If probe is not connected using a Vaisala USB cable, check the supply voltage.
Software restart	Device has automatically restarted itself	Check that supply voltage is stable and operating environment is within specification
Unexpected device restart		
Status messages		
Calibration is about to expire	Shown by calibration reminder functionality	Calibrate the probe and update the calibration date information
Purge in progress	Chemical purge of the humidity sensor ongoing	Wait for chemical purge to complete
The readings stay frozen until the sensor cools down	Probe is waiting for its sensors to cool down	Wait for measurement readings to become available

## 8. Technical data

### 8.1 HMP3 specifications

Table 6 Measurement performance

Property	Description/value
<b>Relative humidity</b>	
Measurement range	0 ... 100 %RH
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.8 %RH (0 ... 90 %RH)
Factory calibration uncertainty <sup>2)</sup>	±0.5 %RH (0 ... 40 %RH) ±0.8 %RH (40 ... 95 %RH)
T <sub>63</sub> response time	15 s
Sensor options	HUMICAP® R2 HUMICAP® R2C <sup>3)</sup> HUMICAP® 180VC <sup>3) 4)</sup>
<b>Temperature</b>	
Sensor	Pt100 RTD Class F0.1 IEC 60751
Measurement range	–40 ... +120 °C (–40 ... +248 °F)
Accuracy <sup>1) 5)</sup>	±0.1 °C (±0.18 °F)
Factory calibration uncertainty <sup>2)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)

1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.

2) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.

3) Chemical purge feature available with this sensor

4) H<sub>2</sub>O<sub>2</sub> resistant. With HUMICAP® 180VC sensor, accuracy is not specified below –20 °C (–4 °F) operating temperature.

5) Exposing temperature sensor to temperatures outside –20 ... +150 °C (–4 ... +302 °F) may cause permanent additional deviation of ±0.1 °C (0.18 °F)

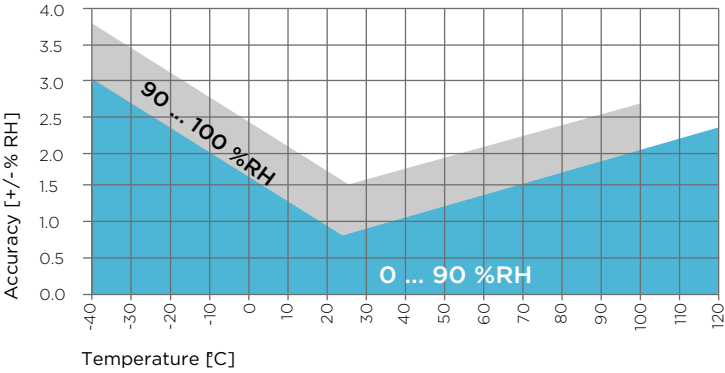


Figure 27 HMP3 humidity measurement accuracy as a function of temperature

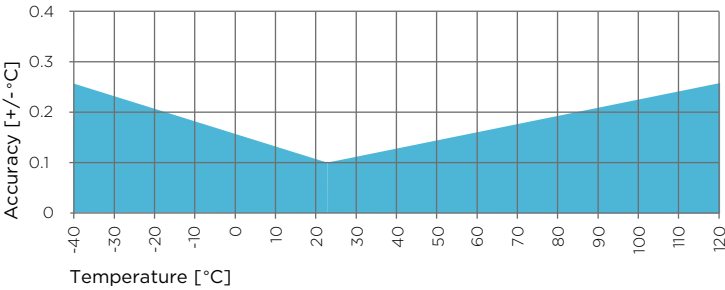


Figure 28 HMP3 temperature measurement accuracy over full range

Table 7 Operating environment

Property	Description/value
Operating temperature of probe head	-40 ... +120 °C (-40 ... +248 °F)
Operating temperature of probe body	-40 ... +80 °C (-40 ... +176 °F)
Storage temperature	-40 ... +80 °C (-40 ... +176 °F)
Operating environment	Suitable for outdoor use
Measurement environment	For air, nitrogen, hydrogen, argon, helium, and oxygen <sup>1)</sup>
IP rating of probe body	IP66
EMC compliance	EN61326-1, industrial environment

1) Consult Vaisala if other chemicals are present. Consider safety regulations with flammable gases.

Table 8 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	10 mA typical, 500 mA max.
Digital output	RS-485, non-isolated
Protocols	Modbus RTU
<b>Output parameters</b>	
Relative humidity, temperature, dew point temperature, dew point temperature difference ( $T-T_{d/t}$ ), wet-bulb temperature, absolute humidity, mixing ratio, water concentration, water vapor pressure, enthalpy	

Table 9 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Weight	302 g (10.65 oz)
<b>Materials</b>	
Probe	AISI316L
Probe body	AISI316L
Cable jacket	FEP

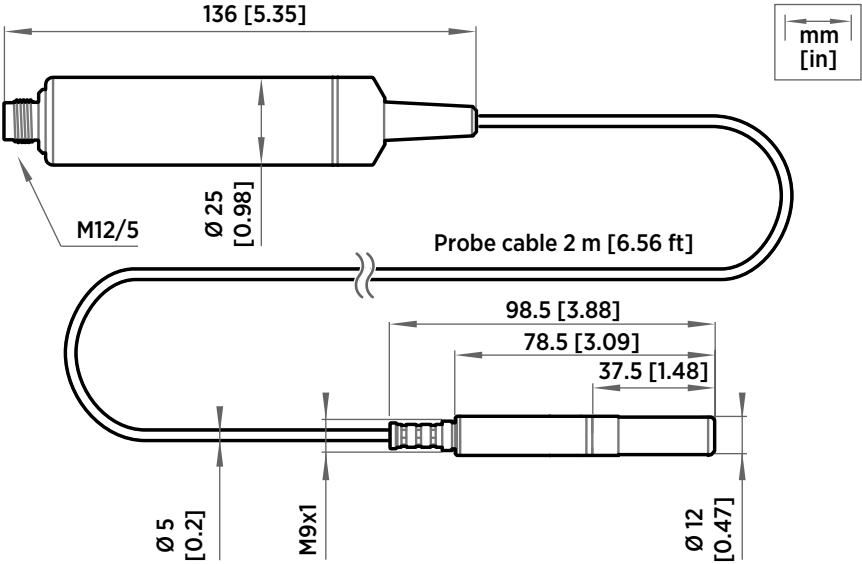


Figure 29 HMP3 probe dimensions

## 8.2 HMP4 specifications

Table 10 Measurement performance

Property	Description/value
<b>Relative humidity</b>	
Measurement range	0 ... 100 %RH
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.8 %RH (0 ... 90 %RH)
Factory calibration uncertainty <sup>2)</sup>	±0.5 %RH (0 ... 40 %RH) ±0.8 %RH (40 ... 95 %RH)
T <sub>63</sub> response time	15 s
Sensor options	HUMICAP® R2 HUMICAP® R2C <sup>3)</sup>
<b>Temperature</b>	
Measurement range	-70 ... +180 °C (-94 ... +356 °F)
Accuracy <sup>1) 4)</sup>	±0.1 °C (±0.18 °F)



Property	Description/value
Factory calibration uncertainty <sup>2)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)
Sensor	Pt100 RTD Class F0.1 IEC 60751

- 1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.
- 2) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.
- 3) Chemical purge feature available with this sensor
- 4) Exposing temperature sensor to temperatures outside -20 ... +150 °C (-4 ... +302 °F) may cause permanent additional deviation of ±0.1 °C (0.18 °F)

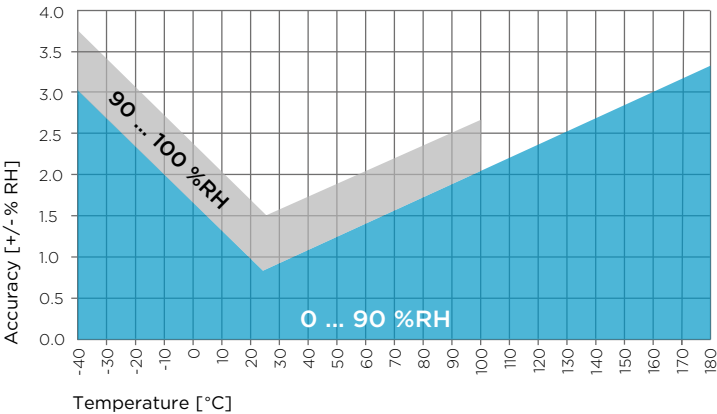


Figure 30 HMP4 humidity measurement accuracy as a function of temperature

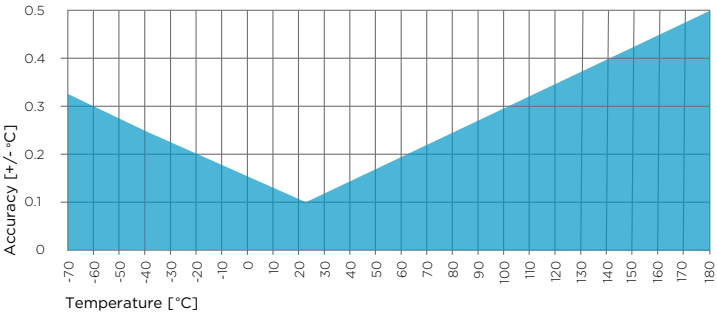


Figure 31 HMP4 temperature measurement accuracy over full range

Table 11 Operating environment

Property	Description/value
Operating temperature of probe body	-40 ... +80 °C (-40 ... +176 °F)
Operating temperature of probe head	-70 ... +180 °C (-94 ... +356 °F)
Operational pressure	< 100 bar
Operating environment	Suitable for outdoor use
Measurement environment	For air, nitrogen, hydrogen, argon, helium, oxygen, and vacuum <sup>1)</sup>
IP rating of probe body	IP66
EMC compatibility	EN61326-1, industrial environment

1) Consult Vaisala if other chemicals are present. Consider safety regulations with flammable gases.

Table 12 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	10 mA typical, 500 mA max.
Digital output	RS-485, non-isolated
Protocols	Modbus RTU
<b>Output Parameters</b>	
Relative humidity, temperature, dew point temperature, wet-bulb temperature, absolute humidity, mixing ratio, water concentration, water mass fraction, water vapor pressure, enthalpy	

Table 13 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Fitting body	M22×1.5 or NPT1/2"
Weight	530 g (18.7 oz)
<b>Materials</b>	
Probe	AISI316
Probe body	AISI316
Cable jacket	FEP

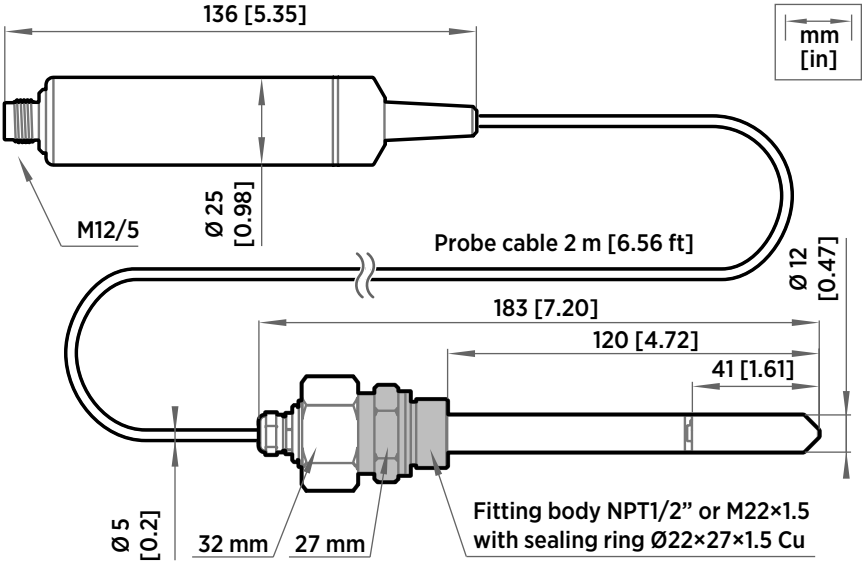


Figure 32 HMP4 probe dimensions

### 8.3 HMP5 specifications

Table 14 Measurement performance

Property	Description/value
<b>Relative humidity</b>	
Measurement range	0 ... 100 %RH
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.8 %RH (0 ... 90 %RH)
Factory calibration uncertainty <sup>2)</sup>	±0.5 %RH (0 ... 40 %RH) ±0.8 %RH (40 ... 95 %RH)
T <sub>63</sub> response time	15 s
Sensor options	HUMICAP® R2 HUMICAP® R2C <sup>3)</sup>
<b>Temperature</b>	
Measurement range	-70 ... +180 °C (-94 ... +356 °F)
Accuracy at +23 °C (+73.4 °F) <sup>1) 4)</sup>	±0.1 °C (±0.18 °F)

Property	Description/value
Factory calibration uncertainty <sup>2)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)
Sensor	Pt100 RTD Class F0.1 IEC 60751

- 1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.
- 2) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.
- 3) Chemical purge feature available with this sensor
- 4) Exposing temperature sensor to temperatures outside -20 ... +150 °C (-4 ... +302 °F) may cause permanent additional deviation of ±0.1 °C (0.18 °F)

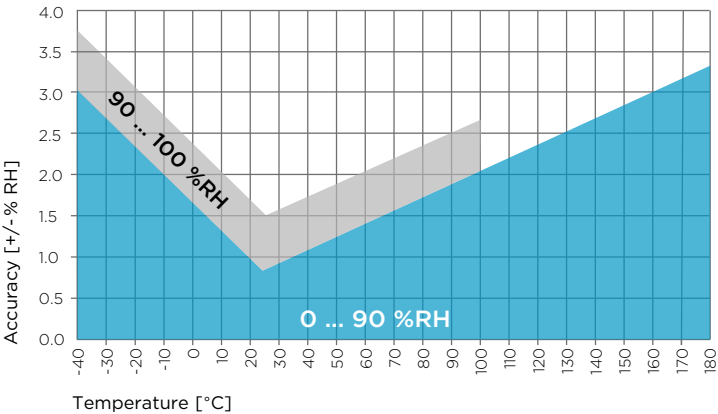


Figure 33 HMP5 humidity measurement accuracy as a function of temperature

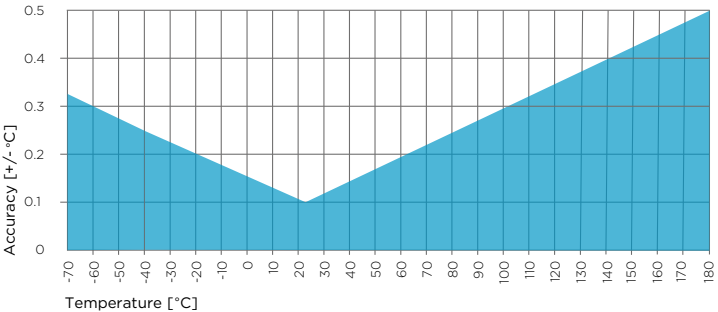


Figure 34 HMP5 temperature measurement accuracy over full range

Table 15 Operating environment

Property	Description/value
Operating temperature of probe body	–40 ... +80 °C (–40 ... +176 °F)
Operating temperature of probe head	–70 ... +180 °C (–94 ... +356 °F)
Operating environment	Suitable for outdoor use
IP rating of probe body	IP66
EMC compliance	EN61326-1, Industrial environment

Table 16 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	10 mA typical, 500 mA max.
Digital output	RS-485, non-isolated
Protocols	Modbus RTU
<b>Output parameters</b>	
Relative humidity, temperature, dew point temperature, wet-bulb temperature, absolute humidity, mixing ratio, water concentration, water mass fraction, water vapor pressure, enthalpy	

Table 17 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Weight	436 g (15.37 oz)
<b>Materials</b>	
Probe	AISI316L
Probe body	AISI316L
Cable jacket	FEP

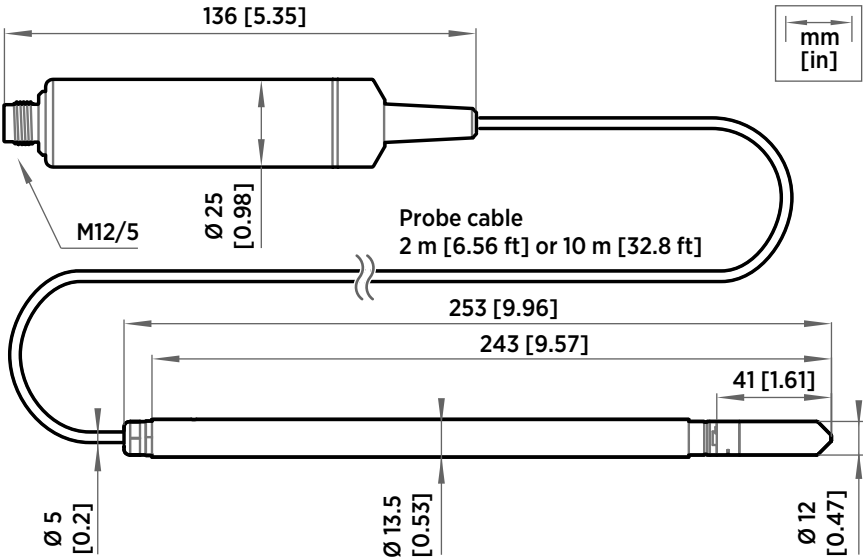


Figure 35 HMP5 probe dimensions

## 8.4 HMP7 specifications

Table 18 Measurement performance

Property	Description/value
<b>Relative humidity</b>	
Measurement range	0 ... 100 %RH
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.8 %RH (0 ... 90 %RH)
Factory calibration uncertainty <sup>2)</sup>	±0.5 %RH (0 ... 40 %RH) ±0.8 %RH (40 ... 95 %RH)
T <sub>63</sub> response time	15 s
Sensor options	HUMICAP® R2 HUMICAP® R2C <sup>3)</sup> HUMICAP® 180VC <sup>3) 4)</sup>
<b>Temperature</b>	
Measurement range	-70 ... +180 °C (-94 ... +356 °F)
Accuracy at +23 °C (+73.4 °F) <sup>1) 5)</sup>	±0.1 °C (±0.18 °F)

Property	Description/value
Factory calibration uncertainty <sup>2)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)
Sensor	Pt100 RTD Class F0.1 IEC 60751

- 1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.
- 2) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.
- 3) Chemical purge feature available with this sensor
- 4) H<sub>2</sub>O<sub>2</sub> resistant. With HUMICAP® 180VC sensor, accuracy is not specified below -20 °C (-4 °F) operating temperature.
- 5) Exposing temperature sensor to temperatures outside -20 ... +150 °C (-4 ... +302 °F) may cause permanent additional deviation of ±0.1 °C (0.18 °F)

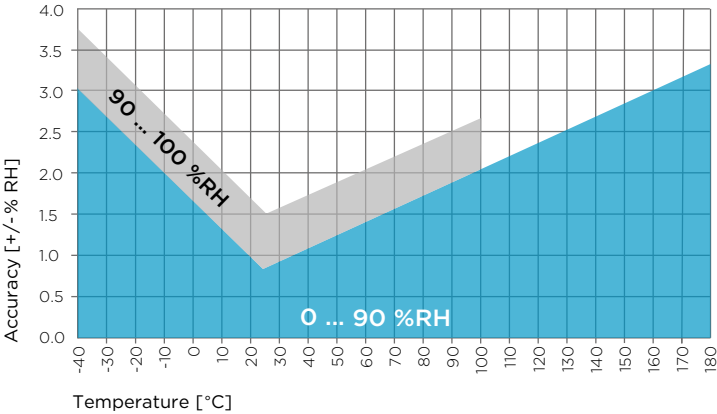


Figure 36 HMP7 humidity measurement accuracy as function of temperature

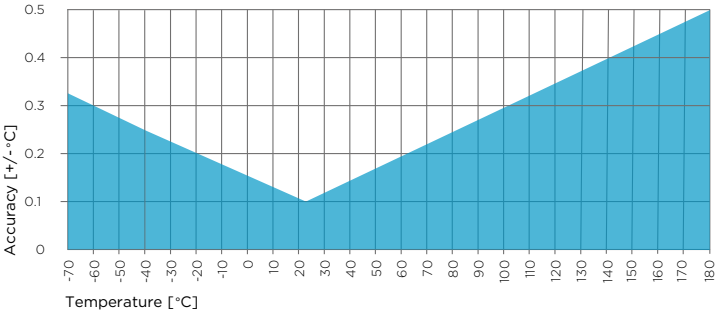


Figure 37 HMP7 temperature measurement accuracy over full range

Table 19 Operating environment

Property	Description/value
Operating temperature of probe body	-40 ... +80 °C (-40 ... +176 °F)
Operating temperature of probe head	-70 ... +180 °C (-94 ... +356 °F)
Operational pressure	< 10 bar
Operating environment	Suitable for outdoor use
Measurement environment	For air, nitrogen, hydrogen, argon, helium, oxygen, and vacuum <sup>1)</sup>
IP rating of probe body	IP66
EMC compatibility	EN61326-1, industrial environment

1) Consult Vaisala if other chemicals are present. Consider safety regulations with flammable gases.

Table 20 Inputs and outputs

Property	Description/value
Operating voltage	18 ... 30 VDC
Current consumption	10 mA typical, 500 mA max.
Digital output	RS-485, non-isolated
Protocols	Modbus RTU
<b>Output parameters</b>	
Relative humidity, temperature, dew point temperature, wet-bulb temperature, absolute humidity, mixing ratio, water concentration, water mass fraction, water vapor pressure, enthalpy	

Table 21 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Weight	310 g (10.9 oz)
<b>Materials</b>	
Probe	AISI316L
Probe body	AISI316L
Cable jacket	FEP



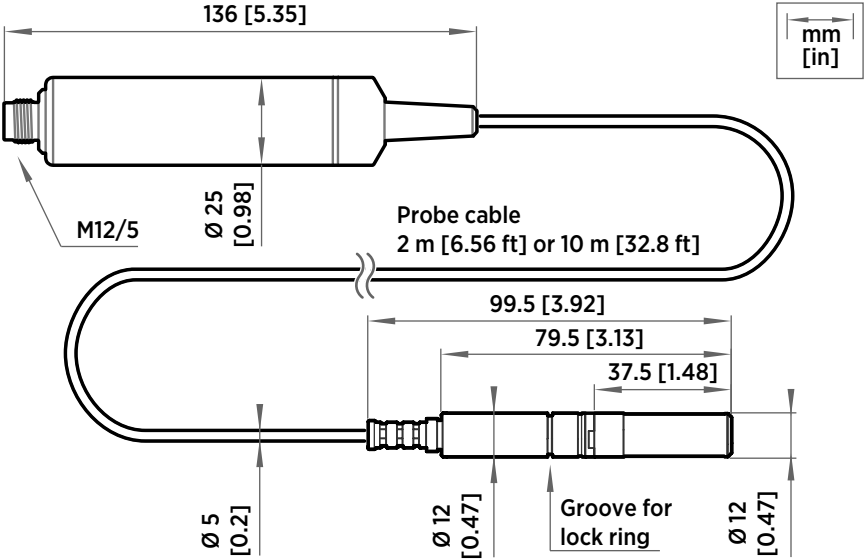


Figure 38 HMP7 probe dimensions

## 8.5 HMP8 specifications

Table 22 Measurement performance

Property	Description/value
<b>Relative humidity</b>	
Measurement range	0 ... 100 %RH
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.8 %RH (0 ... 90 %RH)
Factory calibration uncertainty <sup>2)</sup>	±0.5 %RH (0 ... 40 %RH) ±0.8 %RH (40 ... 95 %RH)
T <sub>63</sub> response time	15 s
Sensor options	HUMICAP® R2 HUMICAP® R2C <sup>3)</sup>
<b>Temperature</b>	
Measurement range	-70 ... +180 °C (-94 ... +356 °F)
Accuracy at +23 °C (+73.4 °F) <sup>1) 1) 4)</sup>	±0.1 °C (±0.18 °F)

Property	Description/value
Factory calibration uncertainty <sup>2)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)
Sensor	Pt100 RTD Class F0.1 IEC 60751

- 1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.
- 2) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.
- 3) Chemical purge feature available with this sensor
- 4) Exposing temperature sensor to temperatures outside -20 ... +150 °C (-4 ... +302 °F) may cause permanent additional deviation of ±0.1 °C (0.18 °F)

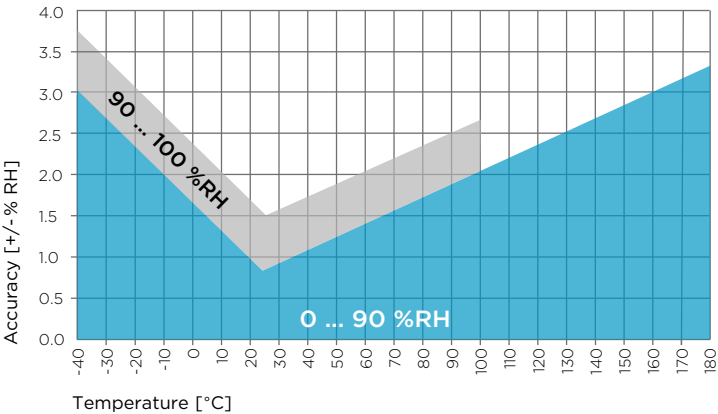


Figure 39 HMP8 humidity measurement accuracy as a function of temperature

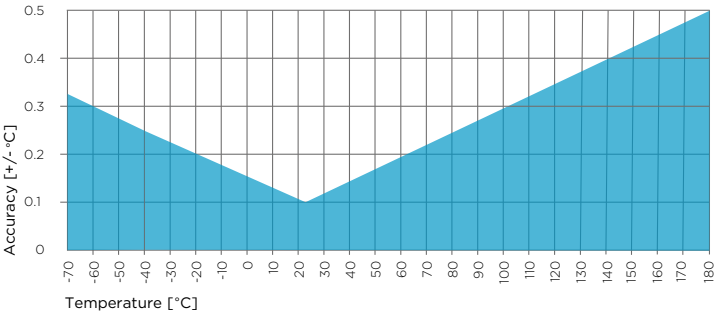


Figure 40 HMP8 temperature measurement accuracy over full range

Table 23 Operating environment

Property	Description/value
Operating temperature of probe body	–40 ... +80 °C (–40 ... +176 °F)
Operating temperature of probe head	–70 ... +180 °C (–94 ... +356 °F)
Operational pressure	< 40 bar
Operating environment	Suitable for outdoor use
Measurement environment	For air, nitrogen, hydrogen, argon, helium, oxygen, and vacuum <sup>1)</sup>
IP rating of probe body	IP66
EMC compliance	EN61326-1, Industrial environment

1) Consult Vaisala if other chemicals are present. Consider safety regulations with flammable gases.

Table 24 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	10 mA typical, 500 mA max.
Digital output	RS-485, non-isolated
Protocols	Modbus RTU
<b>Output parameters</b>	
Relative humidity, temperature, dew point temperature, wet-bulb temperature, absolute humidity, mixing ratio, water concentration, water mass fraction, water vapor pressure, enthalpy	

Table 25 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Probe fitting	ISO1/2" and NPT1/2" fittings included
Weight	512 g (18.1 oz)
<b>Materials</b>	
Probe	AISI316L
Probe body	AISI316L
Cable jacket	FEP

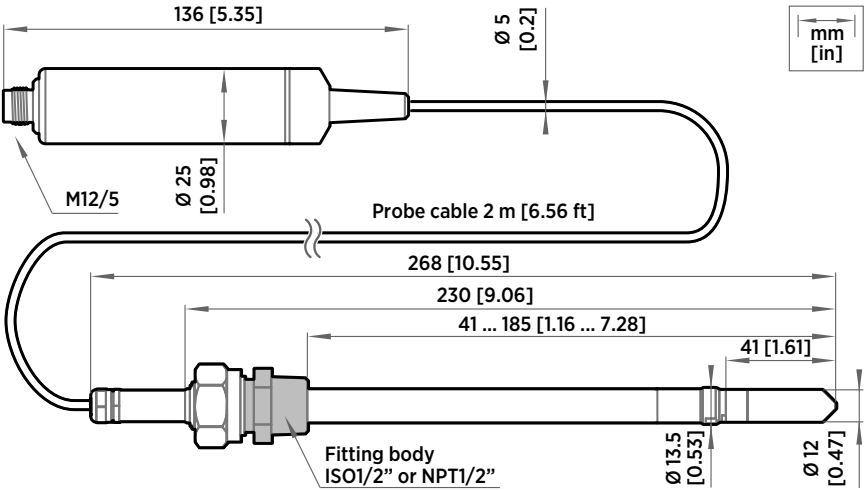


Figure 41 HMP8 probe dimensions

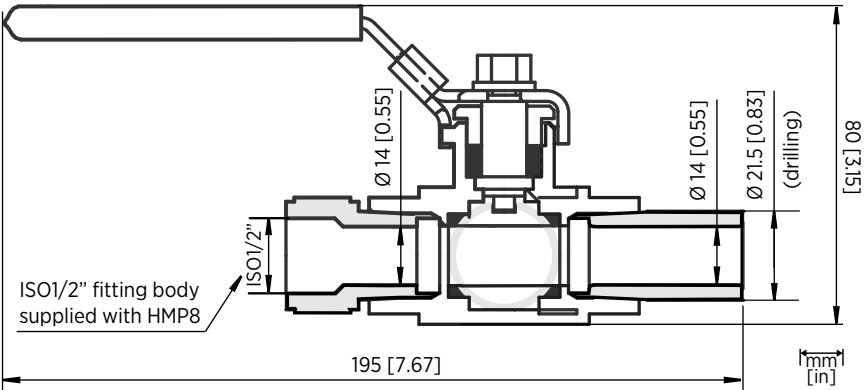


Figure 42 Optional ball valve installation kit dimensions

## 8.6 HMP9 specifications

Table 26 Measurement performance

Property	Description/value
<b>Relative humidity</b>	
Measurement range	0 ... 100 %RH

Property	Description/value
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.8 %RH (0 ... 90 %RH)
Factory calibration uncertainty <sup>2)</sup>	±0.7 %RH (0 ... 40 %RH) ±1 %RH (40 ... 95 %RH)
Non-linearity	0.4 %RH
T <sub>63</sub> response time <sup>3)</sup>	15 s
Sensor	HUMICAP® I
<b>Temperature</b>	
Measurement range	−40 ... +120 °C (−40 ... +248 °F)
Accuracy at +23 °C (+73.4 °F) <sup>1)</sup>	±0.1 °C (±0.18 °F)
Factory calibration uncertainty <sup>2)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)
T <sub>63</sub> response time <sup>3)</sup>	70 s

1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.

2) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.

3) In still air

Table 27 Operating environment

Property	Description/value
Operating temperature of probe body	−40 ... +60 °C (−40 ... +140 °F)
Operating temperature of probe head	−40 ... +120 °C (−40 ... +248 °F)
Storage temperature	−40 ... +60 °C (−40 ... +140 °F)
Operating environment	Suitable for outdoor use when protected from rain
Measurement environment	For air, nitrogen, hydrogen, argon, helium, and oxygen <sup>1)</sup>
IP rating	IP65 for probe body
EMC compliance	EN 61326-1, industrial electromagnetic environment

1) Consult Vaisala if other chemicals are present. Consider safety regulations with flammable gases.

Table 28 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	5 mA typical, 400 mA max.
Digital output	RS-485, non-isolated
Default serial settings	19200 bps N 8 2
Protocol	Modbus RTU
<b>Output parameters</b>	
Relative humidity, temperature, dew point temperature, dew point temperature difference, wet-bulb temperature, absolute humidity, mixing ratio, water concentration, water vapor pressure, water vapor saturation pressure, enthalpy	

Table 29 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Weight	68 g (2.40 oz)
Probe cable length	2 m (6.6 ft)
<b>Materials</b>	
Probe	AISI316
Probe body	PBT
Cable overmolds	FEP

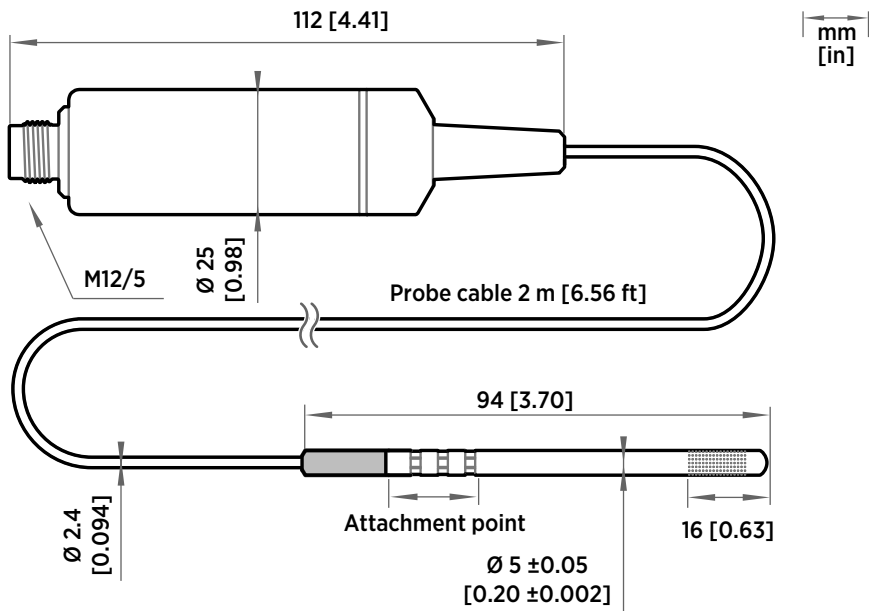


Figure 43 HMP9 probe dimensions

## 8.7 MMP8 specifications

Table 30 Measurement performance

Property	Description/value
<b>Water activity</b>	
Measurement range	0 ... 1 a <sub>w</sub>
T <sub>90</sub> response time <sup>1)</sup>	10 min
Sensor	HUMICAP® 180L2
Accuracy <sup>2)</sup>	±0.01 a <sub>w</sub> (±1 %RS)
<b>Temperature</b>	
Measurement range	-40 ... +180 °C (-40 ... +356 °F)

Property	Description/value
Accuracy at +20 °C (+68 °F)	±0.2 °C (0.36 °F)

- 1) At +20 °C (+68 °F) in still oil.
- 2) In range 0 ... 0.5  $a_w$ , including non-linearity, hysteresis, and repeatability. See accuracy graph below.

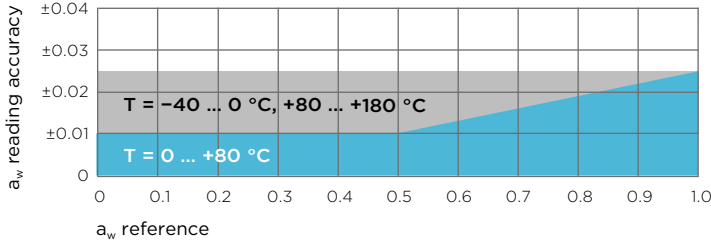


Figure 44  $A_w$  measurement accuracy

Table 31 Operating environment

Property	Description/value
Operating temperature of probe head	−40 ... +180 °C (−40 ... +356 °F)
Operating temperature of probe body	−40 ... +80 °C (−40 ... +176 °F)
Storage temperature range	−40 ... +80 °C (−40 ... +176 °F)
Operating pressure range	0 ... 40 bar (0 ... 580 psia)
Installation pressure	Up to 10 bar (145 psia)
IP rating of probe body	IP66
EMC compliance	EN61326-1, Industrial environment
<b>Ball valve</b>	
Operating temperature	Up to +120 °C (+248 °F)
Operating pressure	Up to 40 bar (0 ... 580 psia)

Table 32 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	10 mA typical
Digital output	RS-485, non-isolated



Property	Description/value
Protocols	Modbus RTU
<b>Output parameters</b>	
Temperature, water activity, relative saturation, water mass fraction (ppm)	

### Table 33 Mechanical Specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Weight	510 g (18.0 oz)
Filter options	Stainless steel grid standard filter Stainless steel grid filter for high flow rates (> 1 m/s)
Probe cable length	2 m (6.56 ft)
Adjustable installation depth	35 ... 179 mm (1.37 ... 7.05 in)
<b>Materials</b>	
Probe	AISI316L
Probe body	AISI316L
Cable jacket	FEP

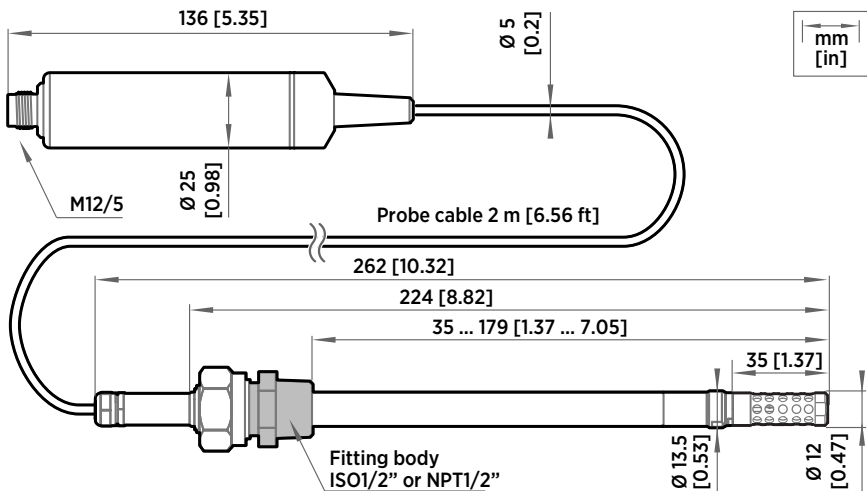


Figure 45 MMP8 dimensions

## 8.8 TMP1 specifications

Table 34 Measurement performance

Property	Description/value
Measurement range	-70 ... +180 °C (-94 ... +356 °F)
Accuracy at +23 °C (+73.4 °F) <sup>1) 2)</sup>	±0.1 °C (±0.18 °F)
Factory calibration uncertainty <sup>3)</sup>	±0.1 °C (±0.18 °F) at +23 °C (+73.4 °F)
Sensor	Pt100 RTD Class F0.1 IEC 60751

- 1) Defined against calibration reference. Including non-linearity, hysteresis, and repeatability.  
2) Exposing temperature sensor to temperatures outside -20 ... +150 °C (-4 ... +302 °F) may cause permanent additional deviation of ±0.1 °C (0.18 °F)  
3) Defined as ±2 standard deviation limits. Small variations possible; see calibration certificate.

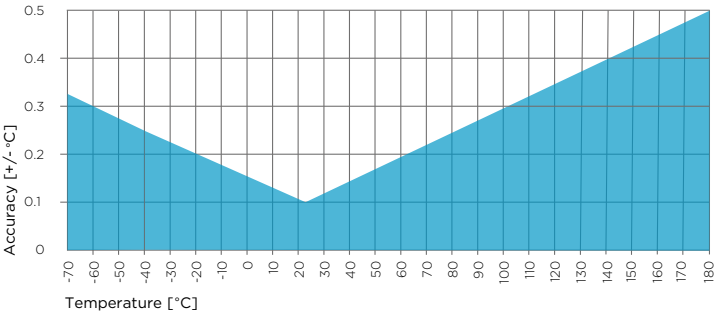


Figure 46 TMP1 temperature measurement accuracy over full range

Table 35 Operating environment

Property	Description/value
Operating temperature of probe body	-40 ... +80 °C (-40 ... +176 °F)
Operating temperature of probe head	-70 ... +180 °C (-94 ... +356 °F)
Operating environment	Suitable for outdoor use
EMC compatibility	EN61326-1, industrial environment
<b>IP rating</b>	
Probe body	IP66
Probe head and cable	IPX8 and IPX9

Table 36 Inputs and outputs

Property	Description/value
Operating voltage	15 ... 30 VDC
Current consumption	10 mA typical
Digital output	RS-485, non-isolated
Protocols	Modbus RTU
Output parameters	Temperature, water vapor saturation pressure

Table 37 Mechanical specifications

Property	Description/value
Connector	M12 5-pin A-coded male
Weight	224 g (7.9 oz)
<b>Materials</b>	
Probe	AISI316L
Probe body	AISI316L
Cable jacket	FEP

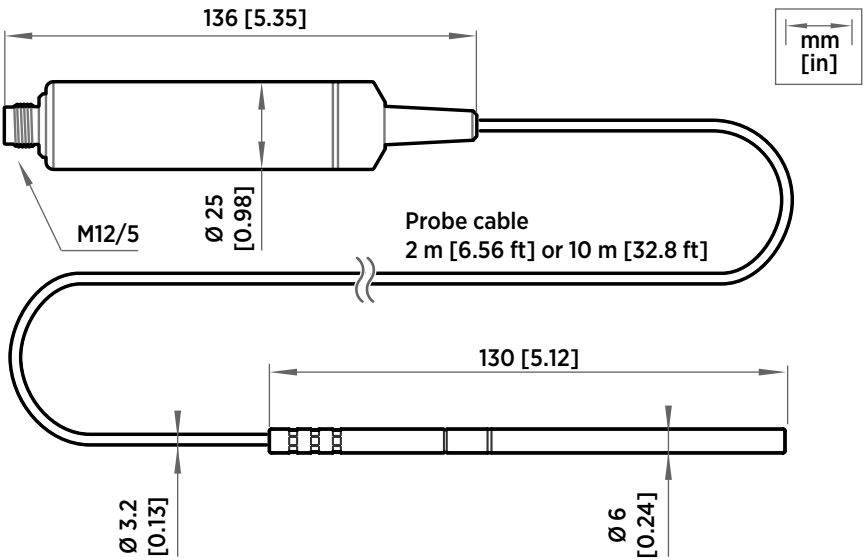


Figure 47 TMP1 probe dimensions

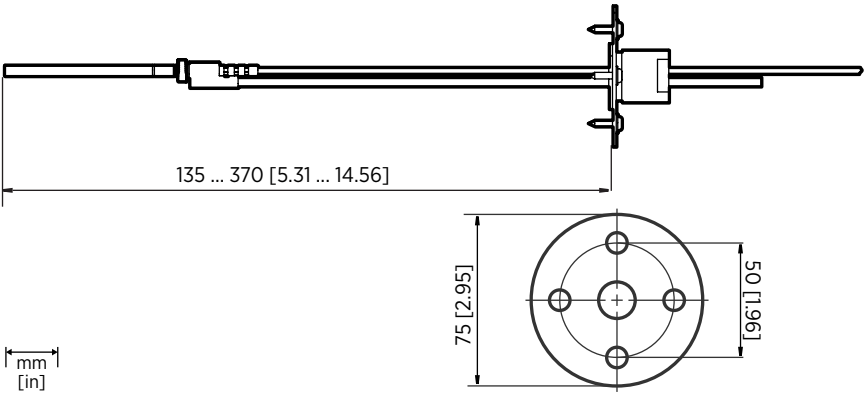


Figure 48 Optional duct kit 215003 dimensions

## 8.9 Accessories and spare parts



Information on spare parts, accessories, and calibration products is available online at [www.vaisala.com](http://www.vaisala.com) and [store.vaisala.com](http://store.vaisala.com).

### Connection cables

Table 38 Connection cables

Description	Item code
Connection cable, M12-5F - M12-5M, 1 m	INDIGOCABLE1M
Connection cable, M12-5F - M12-5M, 3 m	INDIGOCABLE3M
Connection cable, M12-5F - M12-5M, 5 m	INDIGOCABLE5M
Connection cable, M12-5F - M12-5M, 10 m	INDIGOCABLE10M
Connection cable, M12-5F - open wires, 1.5 m	223263SP
Connection cable, M12-5F - open wires, 10 m	216546SP
Connection cable, M12-5F 90° - open wires, 0.6 m	244669SP
Flat cable, M12-5F - M12-5M, 1 m	CBL210493SP
USB PC connection cable <sup>1)</sup>	242659

1) Vaisala Insight software for Windows available at [www.vaisala.com/insight](http://www.vaisala.com/insight)

## HMP3

Table 39 Accessories

Description	Order code
Duct installation kit	210697
Solar radiation shield DTR502B	DTR502B

Table 40 Spare parts

Description	Item code
<b>Sensors</b>	
HUMICAP® R2	VHM180
<b>Filters</b>	
Sintered stainless steel filter	HM47280SP
Stainless steel grid filter	HM47453SP
Metallized PPS plastic grid filter	DRW010276SP
Metallized PPS plastic grid with stainless steel mesh filter	DRW010281SP

## HMP4

Table 41 Spare parts

Description	Item code
Sintered stainless steel filter	HM47280SP
Stainless steel grid	HM47453SP
Metallized PPS plastic grid with stainless steel mesh filter	DRW010281SP
Metallized PPS plastic grid filter	DRW010276SP

## HMP5

Table 42 Accessories

Description	Item code
Mounting flange	210696

Table 43 Spare parts

Description	Item code
Sintered stainless steel filter	HM47280SP
Stainless steel grid	HM47453SP
Metallized PPS plastic grid with stainless steel mesh filter	DRW010281SP
Metallized PPS plastic grid filter	DRW010276SP

## HMP7

Table 44 Accessories

Description	Item code
Duct installation kit for RH probe	210697
Solar radiation shield DTR502B	DTR502B
Cable gland M20×1.5 with split seal	HMP247CG
Swagelok® for 12 mm probe, 1/2" ISO thread	SWG12ISO12
Swagelok® for 12 mm probe, 3/8" ISO thread	SWG12ISO38
Swagelok® for 12 mm probe, 1/2" NPT thread	SWG12NPT12

Table 45 Spare parts

Description	Item code
Sintered stainless steel filter	HM47280SP
Stainless steel grid	HM47453SP
Metallized PPS plastic grid with stainless steel mesh filter	DRW010281SP
Metallized PPS plastic grid filter	DRW010276SP

## HMP8

Table 46 Accessories

Description	Item code
Ball valve 1/2" with ISO 1/2" welding joint	BALLVALVE-1

Table 47 Spare parts

Description	Item code
Sintered stainless steel filter	HM47280SP
Stainless steel grid	HM47453SP
Metallized PPS plastic grid with stainless steel mesh filter	DRW01028ISP
Metallized PPS plastic grid filter	DRW010276SP

## HMP9

Table 48 Accessories

Description	Item code(s)
Solar radiation shield DTR502B with sensor head support 215130	DTR502B and 215130

## MMP8

Table 49 Accessories

Description	Item code
Ball valve ISO 1/2" with welding joint	BALLVALVE-1
Ball valve ISO 1/2" with thread joint ISO 3/4"	BALLVALVE-2

Table 50 Spare parts

Description	Item code
Stainless steel grid filter	HM47453
Stainless steel grid filter for high flow rates (> 1 m/s)	220752

## TMP1

Table 51 Accessories

Description	Item code
Duct installation kit for T probe	215003
Swagelok® for 6 mm probe 1/8" ISO thread	SWG6ISO18

Description	Item code
Swagelok® for 6 mm probe 1/8" NPT thread	SWG6NPT18



## Appendix A. Modbus reference

### A.1 Default communication settings

Table 52 Default Modbus serial communication settings

Property	Description/value
Serial bit rate	19200
Parity	None
Number of data bits	8
Number of stop bits	2
Flow control	None
Modbus device address	240

You can use up to ten probes on the same RS-485 line. You must configure each probe on the line to have a different Modbus address.

### A.2 Function codes

Table 53 Modbus function codes

Function code (decimal)	Function code (hexadecimal)	Name	Notes
03	03 <sub>hex</sub>	Read Holding Registers	Class 0
16	10 <sub>hex</sub>	Write Multiple Registers	Class 0
43 / 14	2B <sub>hex</sub> / 0E <sub>hex</sub>	Read Device Identification	

### A.3 Data encoding

In the data registers, the numeric values are available in one or two formats with separate register addresses: 32-bit IEEE floating point format and/or 16-bit signed integer format.



For values that have both 32-bit and 16-bit register available, use of the 32-bit register is recommended. Some values may exceed the signed 16-bit range even in normal operation.

### A.3.1 32-bit floating point or integer format

Registers using **32-bit float** data format are encoded using the **binary32** encoding defined in IEEE 754. The format is also known as "single-precision floating point format".

The least significant 16 bits of a floating point number are placed at the Modbus register listed in the table, while the most significant 16 bits are placed in the register with number/address + 1, as specified in Open Modbus TCP Specification, Release 1.0. This is also known as "little-endian" or "Modicon" word order.

Despite the specification, some Modbus masters may expect a "big-endian" word order (most significant word first). In such case, you must select "word-swapped" floating point format in your Modbus master for the Modbus registers of the device.



A complete 32-bit floating point or integer value should be read and written in a single Modbus transaction.



Reading the measurement data registers with incorrect floating point format setting may occasionally result in correct-looking values. It is highly recommended to verify that you have configured the floating point format correctly on your Modbus host system by reading a floating point value from a test value register.

### A.3.2 16-bit integer format

Some 16-bit integer values in the data registers are scaled to include the necessary decimals. The scaling factors for those values are shown in the register tables.

Table 54 Interpretation of 16-bit signed integer values

Value (decimal)	Value (hexadecimal)	Description
0 ... 32766	0000 <sub>hex</sub> ... 7FFE <sub>hex</sub>	Value in range 0 ... 32766
32767	7FFF <sub>hex</sub>	Value is 32767 or larger
32768	8000 <sub>hex</sub>	Value is not available
32769	8001 <sub>hex</sub>	Value is -32767 or smaller
32770 ... 65535	8002 <sub>hex</sub> ... FFFF <sub>hex</sub>	Value in range -32766 ... -1 (2's complement)

## A.4 Modbus registers



**CAUTION!** Registers are numbered in decimal, starting from 1. Register addresses in actual Modbus messages (Modbus Protocol Data Unit (PDU) are in hexadecimal and start from zero. Subtract 1 from the register number presented in this manual to get the address used in the Modbus message. For example, register number 1 corresponds to address 0<sub>hex</sub> in the actual Modbus message. Please check the reference documentation of your Modbus host (PLC) for the notation of Modbus register addresses.

### A.4.1 Measurement data registers

Table 55 Floating point measurement data registers (read-only)

Register number	Address	Register description	Data format	Unit
1	0000 <sub>hex</sub>	Relative humidity	32-bit float	%RH
	0001 <sub>hex</sub>			
3	0002 <sub>hex</sub>	Temperature	32-bit float	°C
	0003 <sub>hex</sub>			
7	0006 <sub>hex</sub>	Dew point temperature	32-bit float	°C
	0007 <sub>hex</sub>			
9	0008 <sub>hex</sub>	Dew/frost point temperature	32-bit float	°C
	0009 <sub>hex</sub>			
11	000A <sub>hex</sub>	Dew/frost point temperature at 1 atm	32-bit float	°C
	000B <sub>hex</sub>			
13	000C <sub>hex</sub>	Dew point temperature at 1 atm	32-bit float	°C
	000D <sub>hex</sub>			
15	000E <sub>hex</sub>	Absolute humidity	32-bit float	g/m <sup>3</sup>
	000F <sub>hex</sub>			
17	0010 <sub>hex</sub>	Mixing ratio	32-bit float	g/kg
	0011 <sub>hex</sub>			
19	0012 <sub>hex</sub>	Wet-bulb temperature	32-bit float	°C
	0013 <sub>hex</sub>			

Register number	Address	Register description	Data format	Unit
21	0014 <sub>hex</sub>	Water concentration	32-bit float	ppm <sub>v</sub>
	0015 <sub>hex</sub>			
23	0016 <sub>hex</sub>	Water vapor pressure	32-bit float	hPa
	0017 <sub>hex</sub>			
25	0018 <sub>hex</sub>	Water vapor saturation pressure	32-bit float	hPa
	0019 <sub>hex</sub>			
27	001A <sub>hex</sub>	Enthalpy	32-bit float	kJ/kg
	001B <sub>hex</sub>			
29	001C <sub>hex</sub>	Water activity	32-bit float	
	001D <sub>hex</sub>			
31	001E <sub>hex</sub>	Dew point temperature difference	32-bit float	°C
	001F <sub>hex</sub>			
33	0020 <sub>hex</sub>	Absolute humidity at NTP	32-bit float	g/m <sup>3</sup>
	0021 <sub>hex</sub>			
35	0022 <sub>hex</sub>	Water concentration in oil	32-bit float	ppm <sub>v</sub>
	0023 <sub>hex</sub>			
41	0028 <sub>hex</sub>	Relative saturation	32-bit float	%
	0029 <sub>hex</sub>			
65	0040 <sub>hex</sub>	Water mass fraction	32-bit float	ppm <sub>w</sub>
	0041 <sub>hex</sub>			

Table 56 Integer measurement data registers (read-only)

Register number	Address	Register description	Data format	Scale factor	Offset	Unit
257	0100 <sub>hex</sub>	Relative humidity	16-bit signed integer	100	0	%RH
258	0101 <sub>hex</sub>	Temperature	16-bit signed integer	100	0	°C
260	0103 <sub>hex</sub>	Dew point temperature	16-bit signed integer	100	0	°C

Register number	Address	Register description	Data format	Scale factor	Offset	Unit
261	0104 <sub>hex</sub>	Dew/frost point temperature	16-bit signed integer	100	0	°C
262	0105 <sub>hex</sub>	Dew/frost point temperature at 1 atm	16-bit signed integer	100	0	°C
263	0106 <sub>hex</sub>	Dew point temperature at 1 atm	16-bit signed integer	100	0	°C
264	0107 <sub>hex</sub>	Absolute humidity	16-bit signed integer	100	0	g/m <sup>3</sup>
265	0108 <sub>hex</sub>	Mixing ratio	16-bit signed integer	100	0	g/kg
266	0109 <sub>hex</sub>	Wet-bulb temperature	16-bit signed integer	100	0	°C *
267	010A <sub>hex</sub>	Water concentration	16-bit signed integer	1	0	ppm <sub>v</sub>
268	010B <sub>hex</sub>	Water vapor pressure	16-bit signed integer	10	0	hPa
269	010C <sub>hex</sub>	Water vapor saturation pressure	16-bit signed integer	10	0	hPa
270	010D <sub>hex</sub>	Enthalpy	16-bit signed integer	100	0	kJ/kg
271	010E <sub>hex</sub>	Water activity	16-bit signed integer	10000	0	
272	010F <sub>hex</sub>	Dew point temperature difference	16-bit signed integer	10	0	°C
273	0110 <sub>hex</sub>	Absolute humidity at NTP	16-bit signed integer	100	0	g/m <sup>3</sup>
274	0111 <sub>hex</sub>	Water concentration in oil	16-bit signed integer	1	0	ppm <sub>v</sub>
277	0114 <sub>hex</sub>	Relative saturation	16-bit signed integer	100	0	% *
289	0120 <sub>hex</sub>	Water vapor mass fraction	16-bit signed integer	1	0	ppm <sub>w</sub>

## A.4.2 Configuration registers

Table 57 Modbus configuration data registers (writable)

Register number	Address	Register description	Data format	Unit / valid range
<b>General</b>				
1287	0506 <sub>hex</sub>	Extra heat on/off. Enables heating of humidity sensor when close to saturation. Measurement is disabled for the duration of heating and cooling.	16-bit boolean	0 = off (default) 1 = on
1289	0508 <sub>hex</sub>	Probe heating on/off. Available on HMP7 model only.  When on, output parameters that depend on temperature measurement (for example, relative humidity) are disabled unless temperature is written to register 0334 <sub>hex</sub> from an external source.	16-bit boolean	0 = off (default) 1 = on
2561	0A00 <sub>hex</sub>	User information	Text	Text string of 24 bytes in UTF-8 encoding
<b>Compensation setpoints</b>				
769	0300 <sub>hex</sub>	Pressure compensation setpoint	32-bit float	Unit: hPa Default: 1013.25 hPa
	0301 <sub>hex</sub>			
821	0334 <sub>hex</sub>	Temperature compensation setpoint. If a value is written to this register, probe uses it instead of its own temperature measurement.  When probe heating is in use, temperature must be written to this register to enable output parameters that depend on temperature measurement (for example, relative humidity).	32-bit float	Unit: °C
	0335 <sub>hex</sub>			

<b>Purge</b>				
773	0304 <sub>hex</sub>	Purge interval	32-bit float	Unit: min 10 ... 14400
	0305 <sub>hex</sub>			
1283	0502 <sub>hex</sub>	Interval purge on/off	16-bit boolean	0 = Off 1 = On
1284	0503 <sub>hex</sub>	Startup purge on/off	16-bit boolean	0 = Off 1 = On
<b>Filtering</b>				
795	031A <sub>hex</sub>	Measurement filtering factor	32-bit float	Range: 0.000 ... 1.000  1.000 = Reading shows 100% of the most recent measured value (no filtering, default)  0.01 ... 0.99 = Reading shows 1 ... 99% of the most recent measured value and part of the previous reading (filtering is applied). For example, "0.9" means that the filtered measurement reading = 90% of the most recent measured value + 10% of the previous reading.
	031B <sub>hex</sub>			
1282	0501 <sub>hex</sub>	Enable of disable measurement filtering using the user-defined filtering factor (register 031A <sub>hex</sub> )	16-bit boolean	0 = Off 1 = On
<b>Communication</b>				
1537	0600 <sub>hex</sub>	Modbus address	16-bit integer	1 ... 247 Default: 240

Communication				
1538	0601 <sub>hex</sub>	Bit rate	enum	0 = 300 1 = 600 2 = 1200 3 = 2400 4 = 4800 5 = 9600 6 = 19200 7 = 38400 8 = 57600 9 = 115200
1539	0602 <sub>hex</sub>	Parity, data, stop bits	enum	0 = None, 8, 1 1 = None, 8, 2 2 = Even, 8, 1 3 = Even, 8, 2 4 = Odd, 8, 1 5 = Odd, 8, 2 (default: 1 = None, 8, 2)
1540	0603 <sub>hex</sub>	Response delay	16-bit integer	Unit: ms Range: 0 ... 1000
Functions				
1285	0504 <sub>hex</sub>	Start purge	16-bit function status	When writing to register: 1 = Start purge
1542	0605 <sub>hex</sub>	Restart device	16-bit function status	When writing to register: 1 = Restart the device

A.4.3 Status registers

Table 58 Modbus status data registers (read-only)

Register number	Address	Register description	Data format	Note
513	0200 <sub>hex</sub>	Error status	16-bit boolean	<b>0000<sub>hex</sub></b> : One or more errors active <b>0001<sub>hex</sub></b> : No errors



Register number	Address	Register description	Data format	Note
514	0201 <sub>hex</sub>	Online status	16-bit boolean	<b>0000<sub>hex</sub></b> : Output locked <b>0001<sub>hex</sub></b> : Online data available
516	0203 <sub>hex</sub> 0204 <sub>hex</sub>	Error code	32-bit signed integer	See <a href="#">Table 59 (page 87)</a> .
518	0205 <sub>hex</sub> 0206 <sub>hex</sub>	Security hash	32-bit signed integer	Security hash changes when any change is made to device settings or adjustments.
520	0207 <sub>hex</sub>	RH measurement status	16-bit signed integer	<b>0000<sub>hex</sub></b> : Status OK <b>0002<sub>hex</sub></b> : Reading is not reliable
521	0208 <sub>hex</sub>	T measurement status	16-bit signed integer	<b>0004<sub>hex</sub></b> : Under range <b>0008<sub>hex</sub></b> : Over range
522	0209 <sub>hex</sub>	Tdf measurement status	16-bit signed integer	<b>0020<sub>hex</sub></b> : Value locked <b>0080<sub>hex</sub></b> : Sensor failure <b>0100<sub>hex</sub></b> : Measurement not ready
523	020A <sub>hex</sub>	Device status	16-bit signed integer	<b>0000<sub>hex</sub></b> : Status OK <b>0001<sub>hex</sub></b> : Critical error, maintenance needed <b>0002<sub>hex</sub></b> : Error, device may recover automatically <b>0004<sub>hex</sub></b> : Warning <b>0008<sub>hex</sub></b> : Notification <b>0010<sub>hex</sub></b> : Calibration mode active

Table 59 Error codes in register 0203<sub>hex</sub>

Bitmask	Error message	Severity
0000 <sub>hex</sub>	Status OK	
0001 <sub>hex</sub>	Temperature measurement error	Error
0002 <sub>hex</sub>	Humidity measurement error	Error
0004 <sub>hex</sub>	Humidity sensor failure	Error
0008 <sub>hex</sub>	Capacitance reference error	Error

Bitmask	Error message	Severity
0010 <sub>hex</sub>	Ambient temperature out of range	Error
800000 <sub>hex</sub>	Sensor heater failure	Warning

## A.4.4 Test value registers

Read the known test values from the test registers to verify the functionality of your Modbus implementation.

Table 60 Modbus test registers (read-only)

Register number	Address	Register description	Data format	Test value
7937	1F00 <sub>hex</sub>	Signed integer test	16-bit integer	-12345
7938	1F01 <sub>hex</sub>	Floating point test	32-bit float	-123.45
	1F02 <sub>hex</sub>			
7940	1F03 <sub>hex</sub>	Text string test	text	Text string "-123.45"
	1F04 <sub>hex</sub>			
	1F05 <sub>hex</sub>			
	1F06 <sub>hex</sub>			

## A.5 Device identification objects

Table 61 Device identification objects

Object id	Object id (hexadecimal)	Object name	Example contents
0	00 <sub>hex</sub>	VendorName	"Vaisala"
1	01 <sub>hex</sub>	ProductCode	"HMP4"
2	02 <sub>hex</sub>	MajorMinorVersion	"1.2.3" Software version of the device.
3	03 <sub>hex</sub>	VendorUrl	" <a href="http://www.vaisala.com/">http://www.vaisala.com/</a> "
4	04 <sub>hex</sub>	ProductName	"Humidity and Temperature Probe HMP4"

Object id	Object id (hexadecimal)	Object name	Example contents
5	05 <sub>hex</sub>	ModelName	"7E2A2A0A000" Configuration code of the device. Length and content of the code are model-specific.
6	06 <sub>hex</sub>	UserApplicationName	User definable information text (see configuration register 0A00 <sub>hex</sub> )
128	80 <sub>hex</sub>	SerialNumber <sup>1)</sup>	"K0710040"
129	81 <sub>hex</sub>	CalibrationDate <sup>1)</sup>	"2020-01-31" Calibration date in YYYY-MM-DD format. Empty string if not set/valid.
130	82 <sub>hex</sub>	CalibrationText <sup>1)</sup>	"Vaisala/HEL" Calibration information text. Empty string if not set/valid.

<sup>1)</sup> Vaisala-specific device identification object.

## A.6 Exception responses

Table 62 Modbus exception responses

Code	Name	Reason
01	ILLEGAL FUNCTION	Unsupported function code
02	ILLEGAL DATA ADDRESS	Register address or Object ID out of valid ranges
03	ILLEGAL DATA VALUE	Otherwise invalid request

Accessing unavailable (temporarily missing) measurement data does not generate a Modbus exception. "Unavailable" value (a quiet NaN for floating point data or 8000<sub>hex</sub> for integer data) is returned instead. An exception is generated only for any access outside the applicable register ranges.

# A.7 Modbus communication examples

## Reading relative humidity value




Device address used in the following examples is 240 (F0<sub>hex</sub>).  
Measurement values returned by the device change depending on ambient conditions and/or device settings.

Request		Response	
Bytes on the line (hexadecimal)	Description	Bytes on the line (hexadecimal)	Description
(silence for 3.5 bytes)	Start of Modbus RTU frame	(silence for 3.5 bytes)	Start of Modbus RTU frame
F0 <sub>hex</sub>	Probe address	F0 <sub>hex</sub>	Probe address
03 <sub>hex</sub>	Function (Read Holding Registers)	03 <sub>hex</sub>	Function (Read Holding Registers)
00 <sub>hex</sub>	Register address	04 <sub>hex</sub>	Number of data bytes
00 <sub>hex</sub>		7A <sub>hex</sub>	Value of first register (least significant word)
00 <sub>hex</sub>		E1 <sub>hex</sub>	
02 <sub>hex</sub>	Number of 16-bit registers to read (2)	41 <sub>hex</sub>	Value of second register (most significant word)
D1 <sub>hex</sub>	Modbus RTU checksum	F4 <sub>hex</sub>	
2A <sub>hex</sub>		62 <sub>hex</sub>	Modbus RTU checksum
(silence for 3.5 bytes)	End of Modbus RTU frame	05 <sub>hex</sub>	
		(silence for 3.5 bytes)	End of Modbus RTU frame

Communication description	
Register address	1 (1-based Modbus documentation format) = 0000 <sub>hex</sub> (0-based format used in actual communication).
Data format	Two 16-bit Modbus registers interpreted as IEEE 754 binary32 floating point value, least significant word first.
Returned value	41F47AE1 <sub>hex</sub> , which is binary32 representation of 30.56 (%RH).

## Writing pressure compensation value

Request		Response		
Bytes on the line (hexadecimal)	Description	Bytes on the line (hexadecimal)	Description	
(silence for 3.5 bytes)	Start of Modbus RTU frame	(silence for 3.5 bytes)	Start of Modbus RTU frame	
F0 <sub>hex</sub>	Probe address	F0 <sub>hex</sub>	Probe address	
10 <sub>hex</sub>	Function (Write Multiple Registers)	10 <sub>hex</sub>	Function (Write Multiple Registers)	
03 <sub>hex</sub>	Register address	03 <sub>hex</sub>	Register address	
00 <sub>hex</sub>		00 <sub>hex</sub>		
00 <sub>hex</sub>	Number of registers to write (2)	00 <sub>hex</sub>	Number of 16-bit registers written (2)	
02 <sub>hex</sub>		02 <sub>hex</sub>		
04 <sub>hex</sub>	Number of data bytes	54 <sub>hex</sub>	Modbus RTU checksum	
6E <sub>hex</sub>	Value for first register (least significant word)	AD <sub>hex</sub>		
14 <sub>hex</sub>				
44 <sub>hex</sub>	Value for second register (least significant word)	(silence for 3.5 bytes)	End of Modbus RTU frame	
75 <sub>hex</sub>				
4E <sub>hex</sub>	Modbus RTU checksum	<div>The response to a write function informs that the function was correctly received by the device. It does not guarantee that the written value was accepted by the device (for example, in case out-of-range values).  To verify that the value was really accepted by the device, read the register value after writing.</div>		
AB <sub>hex</sub>				
(silence for 3.5 bytes)	End of Modbus RTU frame			

### Communication description

Register address	769 (1-based Modbus documentation format) = 0300 <sub>hex</sub> (0-based format used in actual communication).
------------------	--

Communication description	
Data format	Two 16-bit Modbus registers interpreted as IEEE 754 binary32 floating point value, least significant word first.
Value to write	44756E14 <sub>hex</sub> = 981.72 (hPa)

## Maintenance and calibration



Vaisala offers comprehensive customer care throughout the life cycle of our measurement instruments and systems. Our factory services are provided worldwide with fast deliveries. For more information, see [www.vaisala.com/calibration](http://www.vaisala.com/calibration).

- Vaisala Online Store at [store.vaisala.com](http://store.vaisala.com) is available for most countries. You can browse the offering by product model and order the right accessories, spare parts, or maintenance and calibration services.
- To contact your local maintenance and calibration expert, see [www.vaisala.com/contactus](http://www.vaisala.com/contactus).

## Warranty

For standard warranty terms and conditions, see [www.vaisala.com/warranty](http://www.vaisala.com/warranty).

Please observe that any such warranty may not be valid in case of damage due to normal wear and tear, exceptional operating conditions, negligent handling or installation, or unauthorized modifications. Please see the applicable supply contract or Conditions of Sale for details of the warranty for each product.

## Technical support



Contact Vaisala technical support at [helpdesk@vaisala.com](mailto:helpdesk@vaisala.com). Provide at least the following supporting information as applicable:

- Product name, model, and serial number
- Software/Firmware version
- Name and location of the installation site
- Name and contact information of a technical person who can provide further information on the problem

For more information, see [www.vaisala.com/support](http://www.vaisala.com/support).

## Recycling



Recycle all applicable material.



Follow the statutory regulations for disposing of the product and packaging.







# VAISALA



**kenelec  
scientific**  
measuring up

Distributed by:

Kenelec Scientific Pty Ltd  
1300 73 22 33  
sales@kenelec.com.au  
www.kenelec.com.au

[www.vaisala.com](http://www.vaisala.com)

