


Good practices



- Always have the HEPA filter on the clear inlet tubing when the PortaCount is running but not sampling/fit testing.
- Operate the 8026 generator sparingly only when there is low particle in the environment . It is not needed to run all the time .
- If 8026 is needed, keep it at least 6 feet away from the portacount
- Perform the nozzle cleaning procedure as per the manual; chapter 6 – service and maintenance
- Do not try to change the output of the flow with the screw adjustment . By increasing that, it can produce too much aerosol.

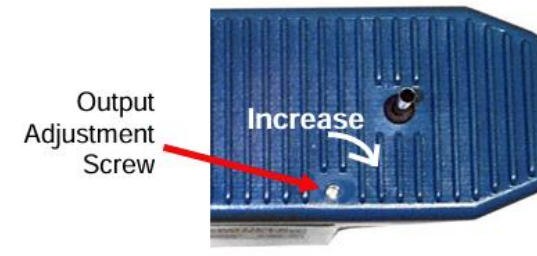

- To dry the internal of the PortaCount units, remove the alcohol cartridge and run the unit dry overnight with the storage cap on and **HEPA filter on the clear inlet tubing.**