INSTALLING THE SOLAR SHIELD ONTO ENVIRONMENTAL ENCLOSURE

MODEL 854030

QUICK START GUIDE

This guide will help you quickly install the Solar Shield for Environmental Enclosure Model 854030.

Unpacking the Solar Shield (854032) for the Environmental Enclosure (854030)

- 1. Unpack the Solar Shield (854032) for Environmental Enclosure (854030) and verify that all the items listed in the following table are present.
- Contact <u>TSI</u> immediately if items are missing or broken.

Qty.	Item Description	Reference Picture
1	Solar Shield	
1	Antenna Post	
1	Retaining Nut with O-ring	
4	3/8" Washers	
4	Sealing Washer	

Qty.	Item Description	Reference Picture
4	3/8"-16 Nut	
4	3/8"–16 x 1.00" Hex Bolt	


Tools Needed for Installation

9/16" Wrench	5==0
(not included)	0




Installing the Solar Shield (854032)

1. If handles are not in place, remove the ½" plugs (qty. 4) included with the 854030 enclosure.

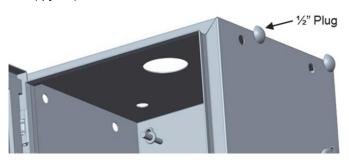

- 2. If using Netronix™ modem, remove top plug and attach antenna post and retaining nut with O-ring. Hand-tighten to enclosure as shown.
- Leave plug in place if Netronix[™] modem antenna will not be used. Antenna post and retaining nut is only needed if planning to use Netronix[™] modem.

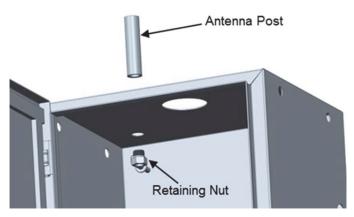

4. Using a 9/16" wrench attach solar shield, bolts, washers, sealing washers, and nuts onto the enclosure as shown.



Sealing washer 3/8"-16 nut



TSI Incorporated – Visit our website <u>www.tsi.com</u> for more information.

USA Tel: +1 800 874 2811 UK Tel: +44 149 4 459200 France Tel: +33 1 41 19 21 99 Germany Tel: +49 241 523030
 India
 Tel: +91 80 67877200

 China
 Tel: +86 10 8219 7688


 Singapore
 Tel: +65 6595 6388

Printed in U.S.A.

P/N 6008675 Rev B ©2016 TSI Incorporated



Note: The Solar Shield installs with the same hardware as the Handles. It is recommended to install both the Handles and Solar Shield at the same time.

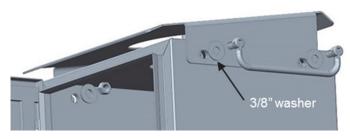

5. This completes the installation of the Solar Shield. Thread the Thiamis™ Antenna (801905) to the top of the Post. Refer to the quick start guide, "Installing the Thiamis™ GSM/GPS Communication Modem in the Environmental Enclosure Model 854030", to complete the installation of your Thiamis™ unit (the jam nut included with the antenna will not be needed).

