

Understanding dew point in vaporized hydrogen peroxide applications

Dew point temperature is one parameter that can represent the amount of water vapor in air, specifically, it is the temperature to which air must be cooled for water vapor to condense into dew or frost. At any temperature there is a maximum amount of water vapor that the air can hold. This maximum amount is called the water vapor saturation pressure. The addition of more water vapor will result in condensation. Read this [blog post](#) for information on dew point.

VH_2O_2 affects dew point

In bio-decontamination applications that use vaporized hydrogen peroxide (VH_2O_2) the condensation point can be a useful parameter. However, when H_2O_2 vapor is present in the air, deriving the dew point from only the water vapor is insufficient because the H_2O_2 vapor will change the dew point.

This is because H_2O_2 vapor affects the water vapor saturation pressure: with an increase in H_2O_2 vapor, the water vapor saturation pressure will decrease. In other words, when the H_2O_2 vapor concentration is increased, the maximum amount of water vapor that the air can hold decreases. Therefore, condensation occurs sooner when vaporized hydrogen peroxide is present. We can refer to this as the mixture dew point that results from the combination of water vapor and H_2O_2 vapor (see Figure 1).

Dew point can never be higher than ambient temperature. If the dew point equals ambient temperature, condensation occurs. This is the point where relative saturation equals 100 %.

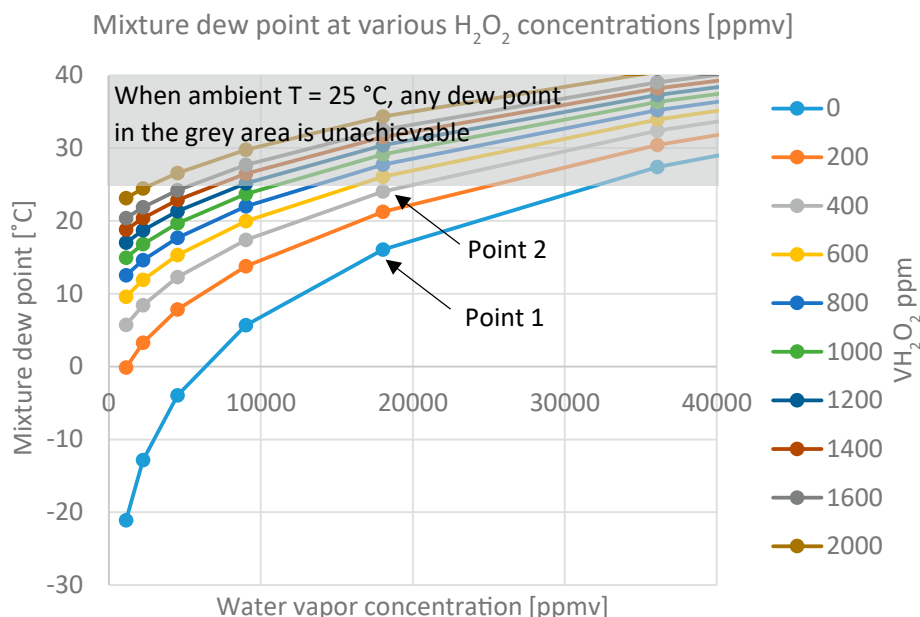


Figure 1. Both H_2O_2 vapor and water vapor affect the mixture dew point. The lines represent different vaporized H_2O_2 concentrations and the X-axis shows different water vapor concentrations. The higher the H_2O_2 vapor concentration, the higher the mixture dew point is, although the water vapor concentration remains the same.

In Figure 1, we see that dew point temperatures over 25 °C in the grey area cannot be achieved if the ambient temperature is 25 °C. Where H_2O_2 vapor concentration is 0 ppm (point 1) and 400 ppm (point 2) and the temperature is 25 °C, the water vapor concentration is 18,040 ppm. At point 1, the mixture dew point is 16.1 °C and relative humidity and relative saturation

are the same 57.7 %RH. At point 2, where the H_2O_2 concentration is 400 ppm, the mixture dew point is 24.0 °C. Relative humidity remains unchanged at 57.7 %RH and relative saturation rises to 91.5 %RS. We see that by adding 400 ppm of H_2O_2 vapor, the mixture dew point increases by 7.9 °C, relative saturation by 33.8 %RS, and the air mixture is brought closer to condensation.

Temperature and maximum H_2O_2 concentration

Dew point is highly linked to condensation and can be used to detect when condensation will occur. In Figure 2, we see the maximum achievable vaporized H_2O_2 concentration when the vapor is produced with 35 % and 59 % H_2O_2 liquid. At every single point along the trend lines, relative saturation is 100 %RS, and mixture dew point equals ambient temperature on the X-axis.

H_2O_2 liquid used to produce H_2O_2 vapor in bio-decontamination applications typically comes as a mixture of water and H_2O_2 . For example, 35 % of the liquid's weight is H_2O_2 and 65 % of its weight is water. When this aqueous solution is vaporized, both H_2O

and H_2O_2 vapor concentrations will increase. Both vapors will affect the mixture dew point. Once condensation occurs, neither the concentration of H_2O_2 or H_2O can be increased. Higher concentration vapors can only be achieved by decreasing the liquid's water content, or by increasing the air temperature. The increase of temperature will increase the gap between mixture dew point and ambient temperature.

Measuring condensation with dew point

Unlike relative humidity or relative saturation, measured mixture dew point is independent of temperature. If temperature is not uniform within the chamber, dew point can be a helpful measurement.



Maximum achievable H_2O_2 at various temperatures:

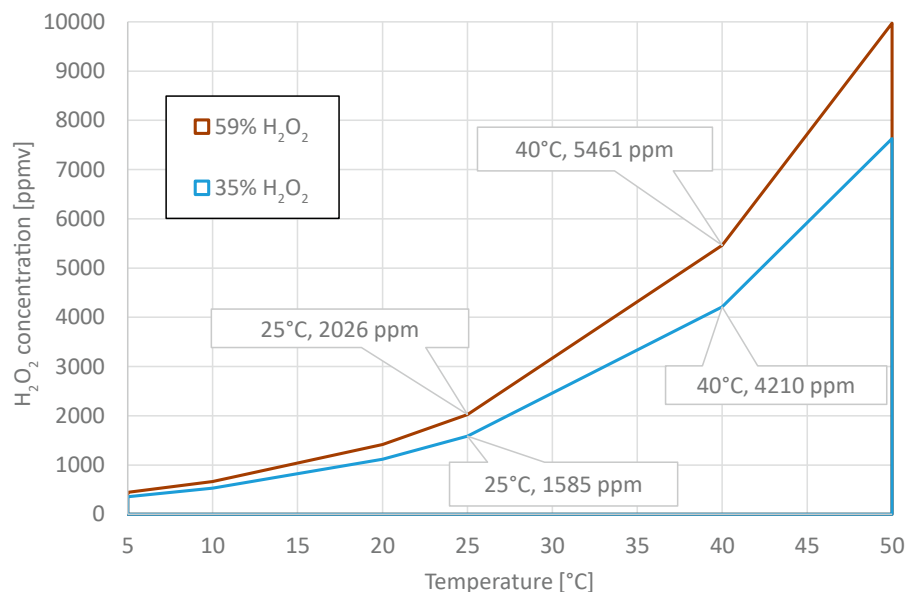


Figure 2. The maximum achievable vaporized H_2O_2 concentration in air when the vapor is produced by vaporizing 35% and 59% H_2O_2 liquid. The maximum achievable H_2O_2 concentration is highly dependent on ambient temperature.

Relative saturation is a good parameter to detect condensation. However, because RS is temperature dependent, probe placement can be critical. When monitoring condensation using mixture dew point, the measurement probe can be placed more freely. Note that the dew point value is the same at every measurement point in Figure 3.

Temperature variability can serve as a guide to choosing the parameter to monitor: relative saturation or dew point. Success in measuring H_2O and H_2O_2 vapors starts with understanding the measurement values and the conditions of your application. With this knowledge, you can choose the best parameter to monitor during vaporized hydrogen peroxide bio-decontamination processes.

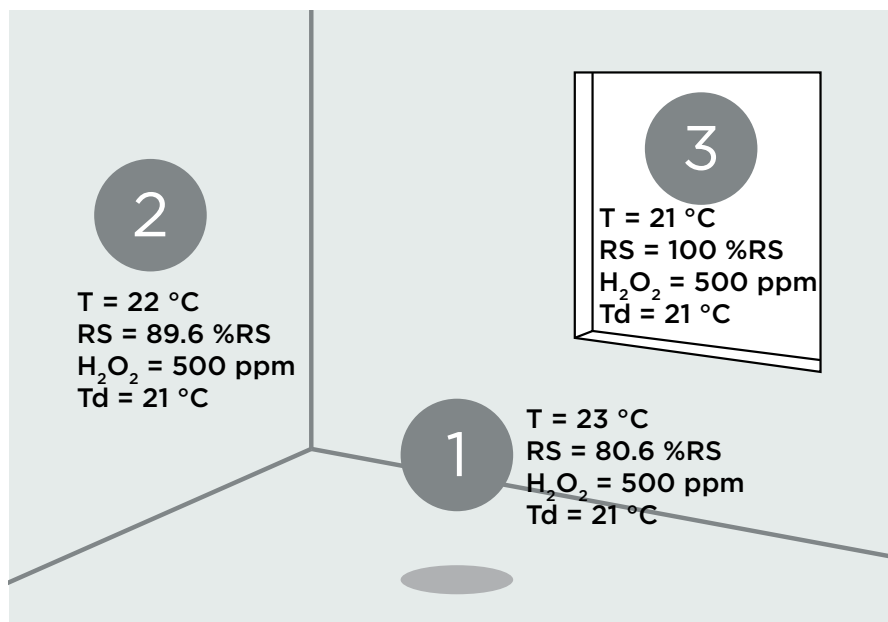


Figure 3. The chamber has an evenly distributed air and vapor mixture, but there are temperature differences between the three measurement points. Condensation will occur first where the temperature is coldest. Td represents both water and hydrogen peroxide vapor mixture dew point.



VAISALA

www.vaisala.com



Please contact us at
www.vaisala.com/contactus



Scan the code for
more information

Ref. B211920EN-A ©Vaisala 2020

This material is subject to copyright protection, with all copyrights retained by Vaisala and its individual partners. All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. The reproduction, transfer, distribution or storage of information contained in this brochure in any form without the prior written consent of Vaisala is strictly prohibited. All specifications — technical included — are subject to change without notice.

Distributed by: Kenelec Scientific Pty Ltd | 1300 73 22 33 | sales@kenelec.com.au | www.kenelec.com.au