



AIRPRO® MOBILE SOLUTIONS



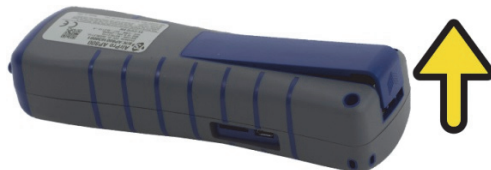

QUICK START GUIDE

Thank You for Purchasing an AirPro Mobile Solution. For further information, please visit us online at www.tsi.com/AirPro.

| Remove and Confirm Equipment | | |
|---|---|---|
|  |  |  |
| Model AP500 | Model AP800 | Models VTH-A, VTH-S, VT-A, VT-S, or TH-S |

| Install Supplied Battery (charge if necessary) | |
|---|--|
|  |  |

| Install Probe (AirPro AP500 only) | |
|---|--|
|  |  |

| Power Instrument On | | | |
|---|---|--|---|
|  |  |  |  |
| | Power indicator | Bluetooth connectivity indicator | Charging indicator |
| | Green = Battery power is OK | Flashing = Broadcasting | On = Battery is charging |
| | Red = Battery power is low | Steady = Connected | Off = Battery is not charging |



- AirPro mobile can be downloaded from <https://itunes.apple.com/us/app/airpro-mobile/id1146476516?mt=8> for iOS.
- AirPro mobile can be downloaded from <https://play.google.com/store/apps/details?id=com.tsi.android&hl=enfor> for Android.
- An account can be created at <https://my.tsi.com>.

| Launch the App and Sign On | Connect to Instrument(s) | Take Measurement |
|----------------------------|--------------------------|------------------|
| | | |

Return for Service

To return the instrument, complete the “Return Merchandise Authorization” form at <http://rma.tsi.com> or call TSI at 1-800-874-2811 (USA), (651) 490-2811, or 001 651 490-2811 (International) for specific return instructions.

Safety and Compliance



W A R N I N G

The AirPro 500 and AirPro 800 Wireless Air Velocity Instrument use a rechargeable Lithium ion battery with built-in protection against fire and explosion hazard. Use only TSI supplied batteries (part number 800532) in this instrument. **DO NOT** use a substitute or non-rechargeable battery. Always dispose of Li-ion batteries in compliance with regional requirements.

Hereby, TSI Incorporated declares that this Bluetooth Low Energy test and measurement instrument is in compliance with Directive 2014/53/EC. Declaration of Conformity can be found at: www.tsi.com/AirPro-CE-DOC.

TSI has provisional patent applications associated with the AirPro Product Solution. For further information, please refer to the TSI website: <http://www.tsi.com/patents/>.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811
 UK Tel: +44 149 4 459200
 France Tel: +33 1 41 19 21 99
 Germany Tel: +49 241 523030

India Tel: +91 80 67877200
 China Tel: +86 10 8219 7688
 Singapore Tel: +65 6595 6388

P/N 6010061 Rev. A (2/23/2017)

©2017 TSI Incorporated

Printed in U.S.A.



Distributed by:
 Kenelec Scientific Pty Ltd
 1300 73 22 33
sales@kenelec.com.au
www.kenelec.com.au