

FIT TEST ADAPTERS MODEL 8025

TSI Model 8025 Fit Test Adapters provide an easy, practical alternative to the probed method of quantitative respirator fit testing. These fit test adapters enable individuals to be quantitatively fit tested in their own respirators. The test adapters yield the same results as fit tests using the conventional probed respirator technique. The adapters offer you the advantage of being able to test the integrity of the individual's assigned respirator while also verifying donning competence and facepiece sizing. Hygienic concerns associated with using a shared test respirator are reduced because the individual uses his/her assigned respirator. Because the fit test adapter components that are exposed to exhaled air are disposable, there is no need to sanitize between fit tests.



How It Works


The fit test adapter connects between the respirator facepiece and the filter cartridge. A PortaCount® Pro or Pro+ Respirator Fit Tester samples through a fitting located on the outside of the adapter which, in turn, connects to a small sample tube on the inside of the adapter. The sample tube passes through the respirator inhalation valve and is firmly positioned via a small suction cup and clip so that a sample can be drawn directly from the breathing zone of the respirator. The adapter incorporates its own inhalation valve, thereby allowing the respirator to function normally while the original valve is temporarily rendered inoperative by the sample tube. Standard quantitative fit testing procedures can be followed.

Features and Benefits

- + Easy to use
- + Permits quantitative fit testing in the employee's own respirator. No more shared test respirators!
- + Allows mask integrity check while fit testing
- + Eliminates the need to sanitize between fit tests because the parts that are exposed to exhaled air are disposable



UNDERSTANDING, ACCELERATED

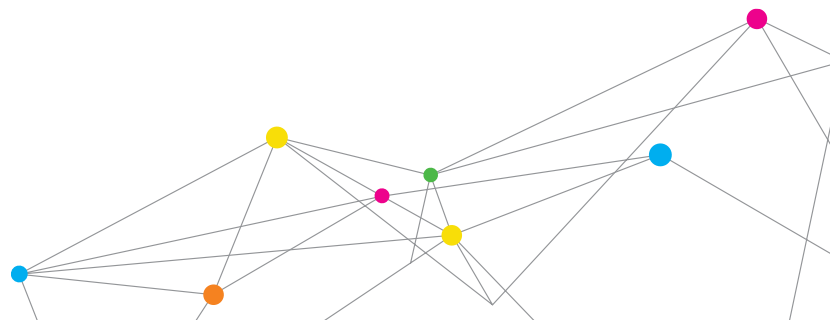


SPECIFICATIONS

FIT TEST ADAPTERS MODEL 8025

Once the fit test is completed, the test adapter is removed and the sample tube, suction cup and clip that have been exposed to the individual's exhaled air, are discarded. This eliminates the need to sanitize any parts between fit tests. Adapters come with supplies for 200 fit tests¹. Additional supplies can be purchased separately.

¹ Adapter designs vary. Some do not use disposable components. TSI, the TSI logo, and PortaCount are trademarks of TSI Incorporated.

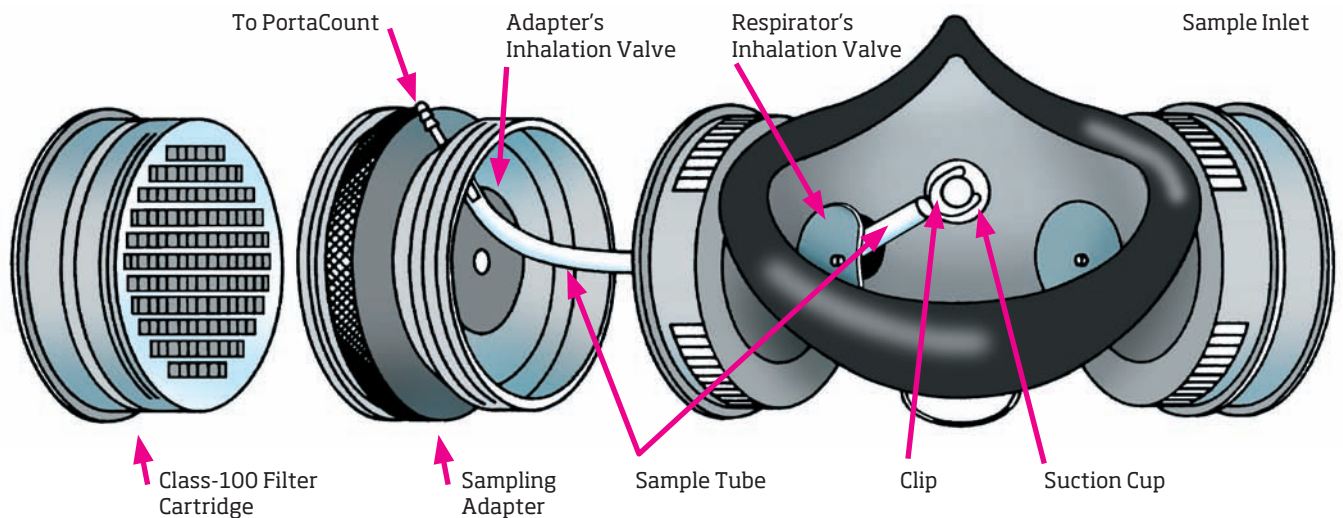

Exploded view showing how a typical fit test adapter is installed onto a respirator. Individual adapters differ in design.



UNDERSTANDING, ACCELERATED

TSI Incorporated - Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811
UK Tel: +44 149 4 459200
France Tel: +33 4 91 11 87 64
Germany Tel: +49 241 523030

India Tel: +91 80 67877200
China Tel: +86 10 8251 6588
Singapore Tel: +65 6595 6388



Distributed by:
Kenelec Scientific Pty Ltd
1300 73 22 33
sales@kenelec.com.au
www.kenelec.com.au