

QUICK START GUIDE

INSTALLING THE HEAT SHIELD




ONTO ENVIRONMENTAL ENCLOSURE

MODEL 8537

This guide will help you quickly install the Heat Shield for Environmental Enclosure Model 8537.





Unpacking the Heat Shield (801846) for the Environmental Enclosure (8537)

1. Unpack the Heat Shield (801846) for Environmental Enclosure (8537) and verify that all the items listed in the following table are present.
2. Contact [TSI](#) immediately if items are missing or broken.

Qty.	Item Description	Reference Picture
1	Heat Shield	
4	Antenna Post	
4	Retaining Nut with O-ring	

Unpacking Handles Included in Environmental Enclosure (8537)

1. Unpack handles included with the Environmental Enclosure (8537) and verify that all the items listed in the following table are present.
2. Contact [TSI](#) immediately if items are missing or broken.

Qty.	Item Description	Reference Picture
2	Handles	
4	Washers	
4	Sealing Washer	
4	Nut	


Tools Needed for Installation

- 9/16" Wrench




Installing the Heat Shield (801846)


1. If you purchased a Thiamis Unit (801900) remove plug and washer. **Skip to step 3 if you did not purchase a Thiamis Unit.**

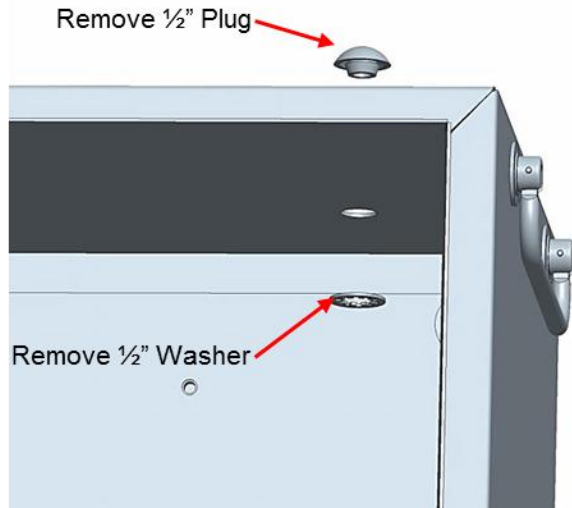

2. Attach antenna post and retaining nut with O-ring to enclosure as shown by hand tightening.

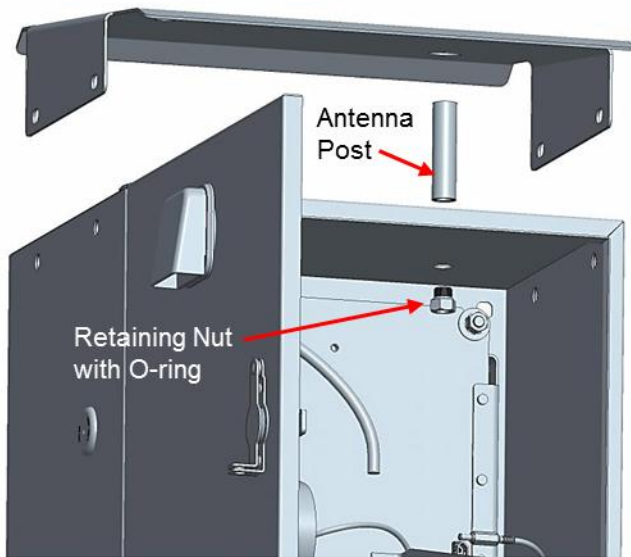

3. Using a 9/16" wrench attach heat shield, handles, washers, sealing washers, and nuts onto the enclosure as shown.

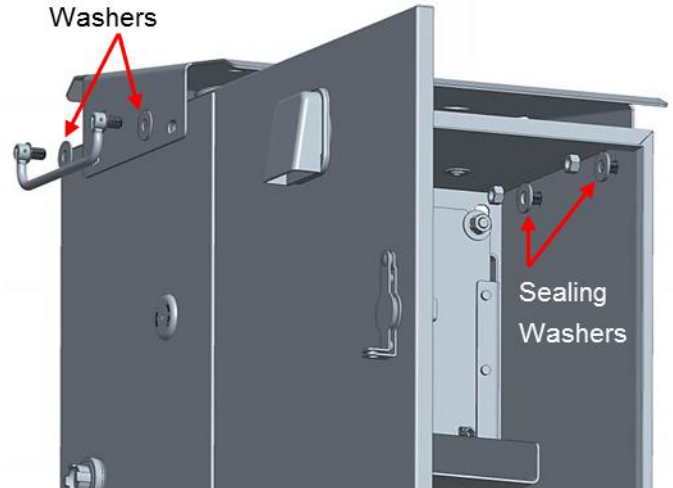

4. Before fully tightening the nuts install the Omni-directional inlet. You may need to adjust the position of the heat shield.



5. This completes the installation of the heat shield. If you purchased a Thiamis Unit (801900), refer to the quick start guide, "Installing the Netronix™ Thiamis™ GSM/GPS Communication Modem in the Environmental Enclosure Model 8537," to install your Thiamis unit.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA	Tel: +1 800 874 2811	India	Tel: +91 80 67877200
UK	Tel: +44 149 4 459200	China	Tel: +86 10 8219 7688
France	Tel: +33 4 91 11 87 64	Singapore	Tel: +65 6595 6388
Germany	Tel: +49 241 523030		



Distributed by:

Kenelec Scientific Pty Ltd
1300 73 22 33
sales@kenelec.com.au
www.kenelec.com.au