

Saving Energy in Ceramics Drying

Vaisala warmed-probe technology helps Koramic Pottelberg reduce energy consumption and improve quality

Koramic Pottelberg, part of Wienerberger Group, manufactures Koramic brand roofing tiles in Kortrijk, Belgium. The facility produces 70 million pieces of ceramic a year, most of which are roofing tiles, for customers in Belgium, the Netherlands, France and the UK, where the climatic conditions demand high-quality tiles. As part of its continuous drive to increase the energy efficiency of its operations, Koramic Pottelberg has incorporated humidity measurements taken by Vaisala equipment as part of its energy-recovery project. As a result, the energy consumption of its dryers has been significantly reduced.



The Koramic Pottelberg project team. From left: Anthony Dessoubrie, Process Engineer; Huguens Quatthanens, Production Manager; Marc Mangelschots, Vaisala; Christophe Le Roux, Process Engineer; and Steven Debels, Plant Manager.

Mastering an ancient craft and a modern challenge

Although transforming clay into building materials is one of the world's oldest trades, brick making is a difficult craft to master. "Our clay is a challenging material for drying,"

says Steven Debels, Plant Manager at Koramic Pottelberg. "It naturally contains a lot of water between the layers. This may cause tensions or cracks in the final product if the drying process is not well controlled," he explains. As well as

product quality, energy consumption is a key consideration. "Our work is all about energy savings. We offer energy-efficient solutions for our customers while also working to reduce energy in our own processes at the same time," he adds.

Challenge



- Clay requires a carefully controlled drying process
- Heat recovery of periodic ovens makes dryer control challenging
- Humidity control in the dryer was unresponsive at the beginning of the drying cycle

Solution

- Vaisala HMT330 Series Humidity and Temperature Transmitters with warmed-probe technology, which enable accurate humidity readings even in condensing conditions

Benefits

- Reduced energy consumption
- Improved dryer control
- Improved end-product quality

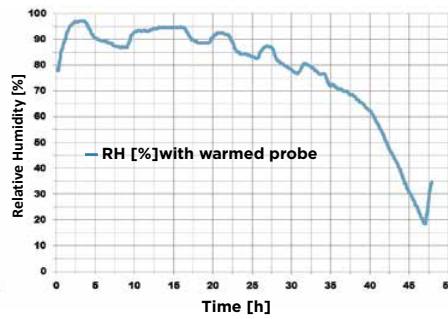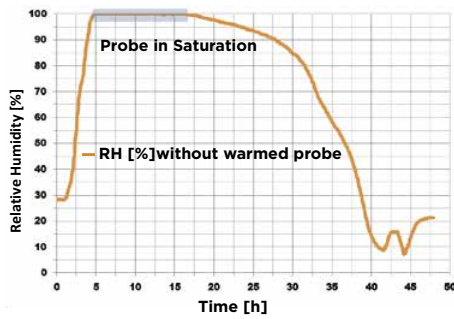

“Vaisala relative humidity transmitters have become standard within the Wienerberger Group.”

Steven Debels,
Plant Manager,
Koramic Pottelberg

A 48-hour drying cycle with the old system (left) and the Vaisala HMT337 with warmed probe (right). The warmed-probe technology provides accurate relative-humidity readings at the beginning of the process, where the non-heated probe is saturated by condensed water.

Multi-stage process

The process begins in the clay preparation area, where raw materials and additives are mixed to achieve the correct grain size and moisture level. The clay is then sent for forming, where the tiles are pressed in metal molds and transferred to large drying chambers. After drying, the tiles are coated before finally being fired in kilns.

In order to reduce its energy consumption, Koramic Pottelberg initiated a project to recover the heat from the firing kilns for use in the drying stage. “Drying is the most critical stage in our process. What makes the energy recovery challenging is the cyclical nature of the periodic dryers,” Steven Debels says. The energy-recovery solution involves a temperature-controlled system for mixing the hot air – at temperatures of up to 750 °C – from the periodic kilns with cool air and then supplying this 130 °C air to the drying stage, which operates at 45–85 °C. Cooling the air to this temperature requires large flows

of dry air into the drying chamber. Relative humidity transmitters, located in the drying chambers, control the drying process. “The humidity must remain at a high level at the beginning of the process. Too fast drying will lead to cracked tiles and lost production,” Debels adds. The humidity in the chamber is controlled by letting moist air out, according to a control signal from the humidity instrument.

After implementing the heat-recovery system, the previously used humidity measurement system was unresponsive at the beginning of the drying cycle. This led to incorrect functioning of the humidity control in the dryer. Marc Mangelschots, Area Sales Manager at Vaisala, came up with a solution. “At the beginning of the drying cycle, the relative humidity in the chamber is close to 100 percent. The condensing environment may saturate the humidity sensor, making the measurement instruments unresponsive. The Vaisala warmed-probe technology allows reliable

measurements to be taken in near condensing conditions,” Mangelschots says.

The first two humidity instruments were replaced with Vaisala HMT337 transmitters with warmed-probe technology, which were instantly able to provide accurate measurement and allow optimal control of the drying process. “In addition to the saved energy, the quality of the tiles is better than ever,” says Anthony Dessoubrie, Process Engineer. Debels explains further: “Energy constitutes 20–25 percent of the total production costs. The new heat-recovery system has allowed us to cut the energy consumed in the drying process by 75%. The financial impact is significant.” Now the plant is in the process of upgrading all 16 relative humidity transmitters in the drying chambers in order to take full advantage of the new energy-recovery process. “Vaisala relative humidity transmitters have become standard within the Wienerberger group,” he concludes.

VAISALA



Please contact us at
www.vaisala.com/requestinfo

Distributed by:
Kenelec Scientific Pty Ltd
1300 73 22 33
sales@kenelec.com.au
www.kenelec.com.au



Scan the code for more information

Ref. B211389EN-A ©Vaisala 2014
This material is subject to copyright protection, with all copyrights retained by Vaisala and its individual partners. All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. The reproduction, transfer, distribution or storage of information contained in this brochure in any form without the prior written consent of Vaisala is strictly prohibited. All specifications – technical included – are subject to change without notice.