

INSTALLER SUPPLIED LOW VOLTAGE TERMINALS (24V NOMINAL)


SELECT LOW or LINE VOLTAGE INCOMING POWER TO DCC, NOT BOTH

RELAY CONTROL WIRING TERMINALS. CONNECT TO COM & N/C. DO NOT USE SOLID CORE WIRE

INSTALLER SUPPLIED OPTIONAL LINE VOLTAGE (90-240 VAC, 50-60 HZ)

NO INTERNAL SENSOR

ART WITH AN INFRARED REFRIGERANT SENSOR

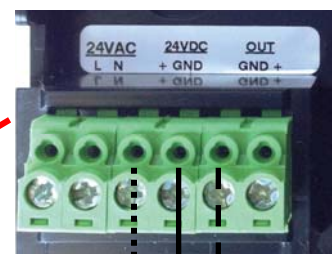

THIS DCC-B-RT / ART COMBINATION MAKES A ONE CHANNEL GAS DETECTION SYSTEM FOR MONITORING A REFRIGERANT (OR GROUP OF REFRIGERANTS) WITH AN INFRARED SENSOR.



Distributed by:
Kenelec Scientific Pty Ltd
1300 73 22 33
sales@kenelec.com.au
www.kenelec.com.au

CRITICAL ENVIRONMENT
TECHNOLOGIES CANADA INC.
www.critical-environment.com

DCC-B-RT WITH ART INFRARED TRANSMITTER
WIRING CONNECTION PHOTO DRAWING
April 6, 2016