

# WHY SHOULD RESPIRATOR USERS BE FIT TESTED?

APPLICATION NOTE RFT-003

Fit testing of respirator users is mandated in countries such as the United Kingdom, Canada and the United States; however most industrialized nations have no such requirement. Given the absence of a fit testing regulation, why would an employer want to implement a respirator fit testing program? The answer is simple: To help workers stay healthy; to help workers maintain productivity; to reduce healthcare costs; and to limit employer liability.

“98 percent of fit tested workers exceeded the minimum protection level compared to only 55 percent of non-fit tested workers.”


## Supporting Data

Research has shown that fit tested respirator wearers achieve higher protection levels from their respirator. A number of workplace protection factor studies have been published around the world over the last 25 years.

A WPF (Workplace Protection Factor) study is where researchers directly measure respirator performance in the actual workplace by collecting samples inside and outside a worker's respirator during work activities. When a worker has a WPF of 100 it means the air inside the respirator was 100 times cleaner than the air outside.

In the U.S., fit testing is required, although in Europe it is not. Therefore, some of these studies mandated a fit test prior to measuring the WPF<sup>(1-13)</sup> while others did not.<sup>(14-17)</sup> Figure 1 shows the distribution of data from these studies on half-facepiece respirators grouped according to whether fit testing was performed. When fit testing was used to screen out poor-fitting half facepiece respirators, a significant improvement in performance was found.




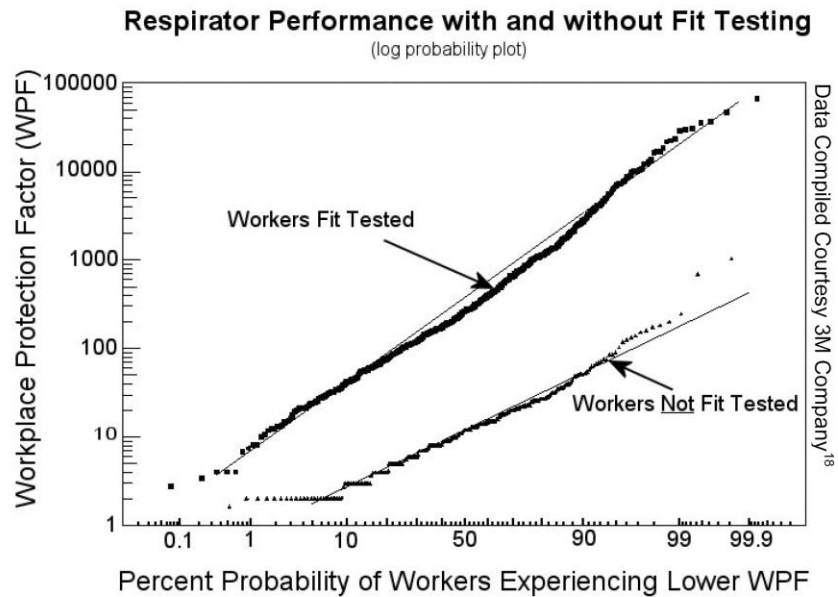

**Figure 1**

**How to read the log probability plot (an example)**

Since the data was collected on half-face respirators, let's use a minimum acceptable WPF of 10, which corresponds to the rating assigned to half-face respirators in the U.S, Canada and the U.K. On Figure 2, a horizontal line representing a WPF of 10 intersects the Workers Not Fit Tested data at about 45 percent. This means that 45 percent of the workers who were not fit tested failed to achieve the minimum protection level of 10 that is expected from a half-face respirator. The same horizontal line intersects the Workers Fit Tested data at about 2. That means that only 2 percent of fit tested workers failed to achieve the protection level of 10. Looking at these results from a more positive viewpoint; 98 percent of fit tested workers exceeded the minimum protection level compared to only 55 percent of non-fit tested workers.

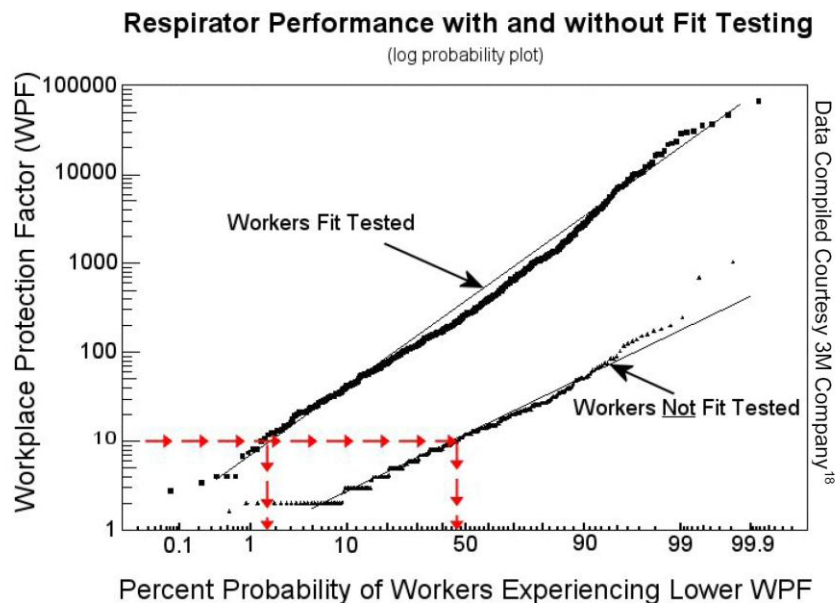

**Figure 2**

In addition, the graph shows that fit tested workers achieve much higher protection levels than non-fit tested workers. For example, 50 percent of fit tested workers achieved a WPF near 200, while 50 percent of non-fit tested workers only achieved a WPF of about 12.

## Summary

While the data presented may not predict actual workplace respirator performance, from a comparative viewpoint, it illustrates the benefit of fit testing. Screening workers with a fit test is useful for identifying those with poor-fitting respirators.

Based on the data presented above, we can conclude that it is beneficial to perform fit testing prior to respirator assignment. Benefits include the following:

- Fit tested workers achieve higher levels of protection from their respirator.
- Fit tested workers are more likely to stay healthy and be productive longer.
- Healthcare expenses are likely to be lower for fit tested workers.
- Employer liability is reduced when workers are fit tested.

## References

1. Gaboury, A., D. H. Burd, and R. S. Friar: Workplace Protection Factor Evaluation of Respiratory Protective Equipment in a Primary Aluminum Smelter. *Appl. Occup. Environ. Hyg.* **8(1): 19-25** (1993).
2. Colton C. E. and J. O. Bidwell: "A Comparison of the Workplace Performance of Two Different Types of High Efficiency Filters on Half Facepiece Respirators." *Paper presented at the 1995 American Industrial Hygiene Conference*, Kansas City, MO, May, 1995.
3. Colton, C. E., J. O. Bidwell, and H. E. Mullins: "Workplace Protection Factors of a Half-Facepiece High Efficiency Respirator in Different Environments." *Paper presented at the 1994 American Industrial Hygiene Conference*, Anaheim, CA, May, 1994.
4. Dixon, S.W. and T. J. Nelson: Workplace Protection Factors for Negative Pressure Half-Mask Facepiece Respirators. *J. Int. Soc. Respir. Prot.* **2(4):347-361**(1984).
5. Galvin K., S. Selvin, and R. C. Spear: Variability in Protection Afforded by Half-Mask Respirators Against Styrene Exposure in the Field. *Am. Ind. Hyg. Assoc. J.* **51:625-639** (1990).
6. Colton, C. E., A. R. Johnston, H. E. Mullins, C. R. Rhoe and W. Myers: "Respirator Workplace Protection Factor Study on a Half Mask Dust/mist Respirator." *Poster presented at the 1990 American Industrial Hygiene Conference*, Orlando, FL, May, 1990.
7. Zhuang, Z. and W. R. Myers: Field Performance Measurements of Half- Facepiece Respirators-Paint Spraying Operations. *Am. Ind. Hyg. Assoc. J.* **57:50-57** (1996).
8. Nelson, T. J. and S. W. Dixon: "Respirator Protection Factors for Asbestos, Parts I and 11." *Paper presented at the 1985 American Industrial Hygiene Conference*, Las Vegas, NV, May, 1985.
9. Gosselink, D. W., D. P. Wilmes, and H. E. Mullins: "Workplace Protection Factor Study for Airborne Asbestos." *Paper presented at the 1986 American Industrial Hygiene Conference*, Dallas, TX, May, 1986.
10. Myers, W. R., Z. Zhuang and T. Nelson: Field Performance Measurements of Half-facepiece Respirators-Foundry Operations. *Am. Ind. Hyg. Assoc. J.* **57:166-174** (1996).
11. Myers, W. R. and Z.. Zhaung: Field Performance Measurements of Half- Facepiece Respirators-Steel Mill Operations. *Am. Ind. Hyg. Assoc. J.* **59:789-795** (1998).

12. Colton, C. E. and H. E. Mullins: "Workplace Protection Factors for a Half Mask Dust/Mist/Fume Respirator." *Poster presented at the 1992 American Industrial Hygiene Conference, Salt Lake City, UT, May, 1992.*
13. Lenhart, S.W. and D. L. Campbell: Assigned Protection Factors for Two Respirator Types Based Upon Workplace Performance Testing. *Ann. Occup. Hyg.* **28(2):173-182** (1984).
14. Hery, M., J. P. Meyer, M. Villa, G. Hubert, J. M. Gerber, G. Hecht, D. Franc and J. Herrault: Measurement of Workplace Protection Factors of Six Negative Pressure Half-Masks. *J. Int. Soc. Respir. Prot.* **11(3):15-38** (1993).
15. Hery, M. V., G. Hubert and P. Martin: Assessment of the Performance of Respirators in the Workplace. *Ann. Occup. Hyg.* **35(2):181-187** (1991).
16. Fergin, S. G.: Respirator Evaluation for Carbon Setters with Beards. *Am. Ind. Hyg. Assoc. J.* **45(8):533-537** (1984).
17. Cohen, H. J.: Determining and Validating the Adequacy of Air-Purifying Respirators Used in Industry Part I-Evaluating the Performance of a Disposable Respirator for Protection Against Mercury Vapor. *J. Int. Soc. Respir. Prot.* **2(3):296-304** (1984).
18. Colton, C. E.: Filtering facepieces: Study supports need for fit-testing. *3M JobHealth Highlights* **17(2):1-4** (1999)

**Note:** Fit testing was not conducted in References 14-17.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website [www.tsi.com](http://www.tsi.com) for more information.

USA Tel: +1 800 874 2811  
 UK Tel: +44 149 4 459200  
 France Tel: +33 4 91 11 87 64  
 Germany Tel: +49 241 523030

India Tel: +91 80 67877200  
 China Tel: +86 10 8251 6588  
 Singapore Tel: +65 6595 6388



Distributed by:  
 Kenelec Scientific Pty Ltd  
 1300 73 22 33  
[sales@kenelec.com.au](mailto:sales@kenelec.com.au)  
[www.kenelec.com.au](http://www.kenelec.com.au)